


Dynalink RTA1320_Rev2 AU Firmware Upgrade Instructions

1. Using your web browser (Internet Explorer, Mozilla Firefox, etc.), enter the IP address of your Dynalink modem router into the Address Bar. The default address is <http://192.168.1.1>.
2. Log on using your administrative user name and password. The default is **admin** and **admin**.
3. Click on **Management** at the top, and then **Update Firmware** on the left.

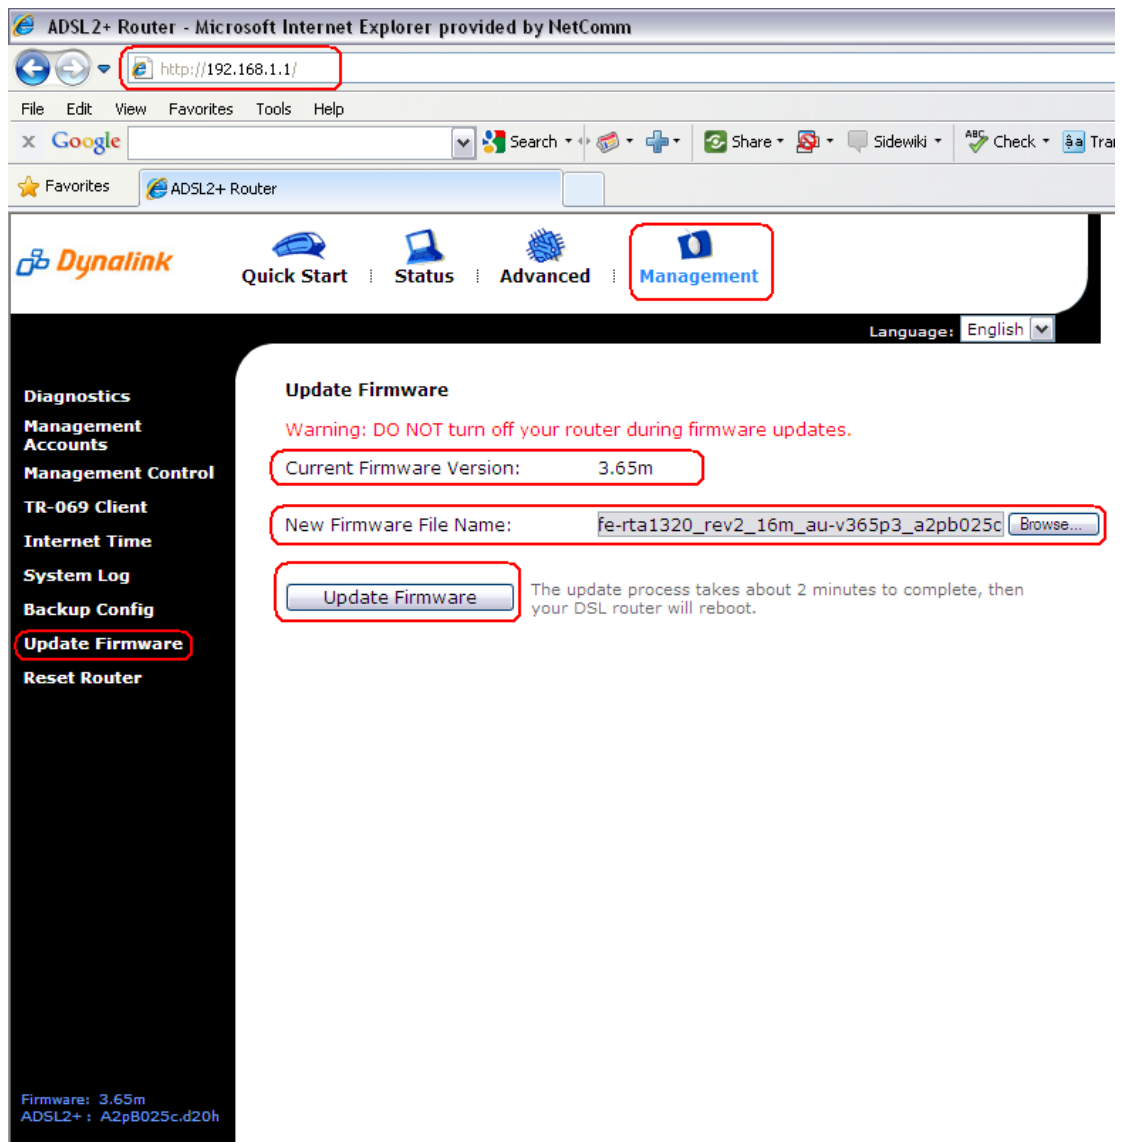

Use the **Browse** button to locate the firmware image file.

4. After selecting the firmware image file named **cfe-rta1320_rev2_16m_au-v365p3_a2pb025c**, click **Update Firmware**, and wait for the process to complete. The upgrade process may take approximately 1-2 minutes, the modem will automatically reboot after firmware upgrade. You will expect 'Power' and your connected 'Ethernet' port's LED light = **green** after firmware upgrade completed if the modem is not connected to an active ISP service line.

NOTE: DO NOT DISCONNECT YOUR PC FROM THE MODEM or POWER THE RTA1320_REV2 OFF DURING FIRMWARE UPGRADE.

5. Your RTA1320_REV2 firmware upgrade is now completed. The version number is now shown on the button left hand side of the web management interface.

