Upgrading the Firmware of the NB5PLUS4/W

1.) Go to the One page setup (i.e. 192.168.1.1). Enter the username 'admin' and password 'admin' then click the 'Advanced Settings' located at the bottom left hand side.

Please Log In to continue.		
	Log In	
	Log III	
Username:	admin	
Password:	•••••	
		Log In


EasyConfig .			
Quick Settings			
Protocol:	PPPoE 💌		
User ID:	username@isp		
Password:	•••••		
VPI:	8		
VCI:	35		
Connection Status:	•		
	Apply Cancel		
Advanced Settings			

2.) Click the 'Tools' Tab





3.) Click the 'Update Gateway' on the left hand Menu. Then specify the location of the firmware by selecting the 'Browse' button. Then select the Update Gateway button.

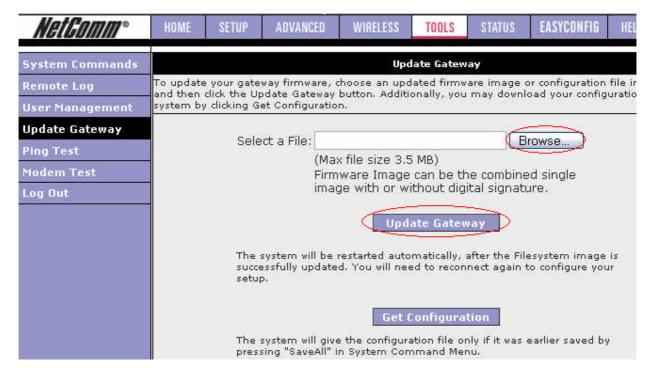

**Please wait approximately 10 minutes for the NB5plus4/W to reboot. You may then log back into the NB5Plus4/W to configure.

