

**NetComm**<sup>®</sup>  
*www.netcomm.com.au*



---

**Increase Wireless Reception**  
(3G15WN)

## Increasing your wireless reception

If you are experiencing wireless reception drop outs or disconnections, another wireless network or device may be broadcasting on the same wireless channel as your own network.

You can usually resolve this by changing the wireless channel in use on your network.

This guide will take you through the steps required to change the wireless channel in use.

1. Open your web browser and go to the address <http://192.168.1.1>, using **admin** as the username and password.
2. Hover your mouse over "**Wireless**" from the menu at the top of the page.
3. Select "**Configuration**" from the menu that appears underneath this.
4. Select a channel at the opposite end of the scale from the one you are currently using. This will mean you avoid any interference you are experiencing on your currently selected channel

**NetComm** 3G15Wn – ADSL2+/3G Wi-Fi Router  
www.netcomm.com.au

Basic 3G Settings Wireless Management Advanced Status

**Wireless -- Advanced**

This page allows you to configure advanced features of the wireless LAN interface. You can select a particular channel on which to operate, set the transmission rate to a particular speed, set the fragmentation threshold, set the RTS threshold, set the wakeup interval for clients in power save mode, set the beacon interval for the access point, set XPress mode and set whether short or long preambles are used. Click "Apply/Save" to configure the advanced wireless options.

Band:	2.4GHz	
Channel:	Auto	Current: 1
Auto Channel Timer(min)	Auto	
802.11n/EWC:	5	
Bandwidth:	6	Both Bands
Control Sideband:	7	Current: 40MHz
802.11n Rate:	8	Current: Lower
802.11n Protection:	9	
Support 802.11n Client Only:	10	
54g™ Rate:	11	
Multicast Rate:	12	
Basic Rate:	13	
Fragmentation Threshold:	2346	
RTS Threshold:	2347	
DTIM Interval:	1	
Beacon Interval:	100	
Global Max Clients:	16	
XPress™ Technology:	Disabled	
Transmit Power:	100%	

Apply/Save

5. Once you have selected your new channel to use (for example: 11), click the "**Apply/Save**" button at the bottom of the page.

If you are still experiencing wireless reception issues, there may be infrastructure (walls, floors, wiring, etc) impeding your wireless signal. Please try moving the wireless device to a position close to your modem / router and try connecting again.