



---

## **Remote Administration Setup**

(NB9)

## **Remote Administration:**

Remote administration allows you to access the modem / router / VOIP ATA configuration page from a computer connected to the internet.

This can also be used to enable your ISP (Internet Service Provider) to check your settings if you experience connection issues.



In the case of a VOIP ATA, you would also need to create a "**Port Forwarding**" rule on your modem / router for port 80 (or the applicable remote administration access port) pointing to your VOIP ATA's IP address.

If your modem / router is a NetComm or Dynalink unit, please see the appropriate "**Port Forwarding**" support document for assistance with adding this rule.



Before enabling remote access to your modem, we recommend changing the username and password required to login.

Please see our "**Changing the default username and password**" document for assistance with this.

You can also limit access to a specific IP or subnet (\*)

This will prevent unauthorised access to your modem.

\* - If supported by your model of modem / router.

## Enabling Remote Administration

This guide will take you through the steps required to enable remote administration access to your modem / router / VOIP ATA.

1. Open your web browser and go to the address <http://192.168.1.1>, using **admin** as the username and password.
2. Click on "**Management**" from the menu on the lefthandside of the page.
3. Click on "**Access Control**" from underneath this.
4. Click on "**Services**" from underneath "**Access Control**".
5. Ensure the "**Enable**" checkbox in the "**WAN**" section is **TICKED**.

NetComm™  
Integrated Access Device

Management > Access Control > Services

A Service Control List ("SCL") enables or disables services from being used.  
The following ports are not recommended for HTTP remote management in case conflict with them for other management purpose in some particular case (21, 2121, 22, 2222, 23, 2323, 69, 6969, 161, 16116)

Services	LAN	WAN
FTP	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable
HTTP	<input checked="" type="checkbox"/> Enable	<input checked="" type="checkbox"/> Enable <input type="text" value="80"/> port
ICMP	Enable	<input checked="" type="checkbox"/> Enable
SNMP	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable
SSH	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable
TELNET	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable
TFTP	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable

Save/Apply

6. Click "**Save/Apply**"

You should now be able to access your modem via the address: <http://<your external IP address>>.

You can find your IP address by going to <http://www.whatip.com/>.

If you wish to limit access to a certain remote IP address, please continue to the next page.