
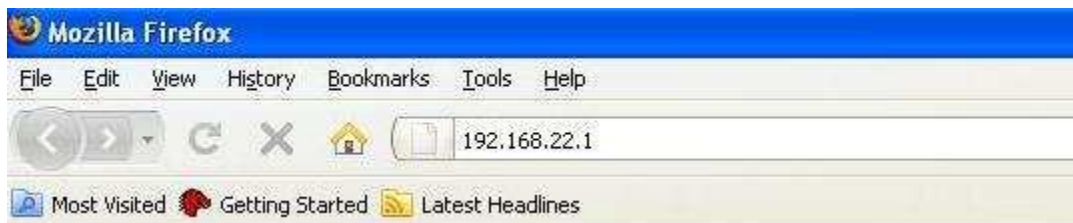


## How to Upgrade the V210P Firmware

- First of all download the firmware file from the Netcomm website at [http://www.netcomm.com.au/asset-listings/firmware-listing?firmware\\_id=13832](http://www.netcomm.com.au/asset-listings/firmware-listing?firmware_id=13832) to your computer.
- Now open up the web-browser in your computer and then enter <http://192.168.22.1> into the address bar before pressing '**Enter**' on your keyboard.

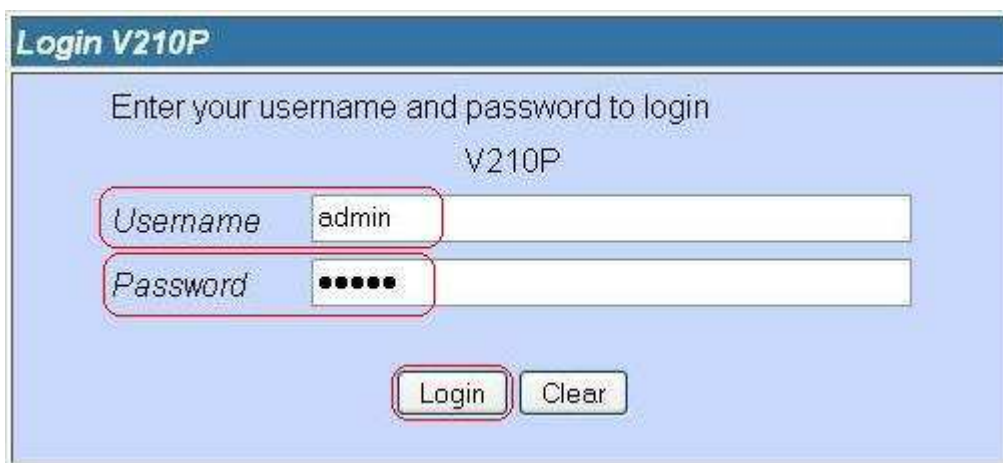

- Now it will prompt for username and password to login in to the device. Enter "**admin**" for both the username and the password and press the '**Login**' button.

A screenshot of the "Login V210P" web page. The page has a blue header with the text "Login V210P". Below the header, it says "Enter your username and password to login". The page is titled "V210P". There are two input fields: "Username" with the text "admin" and "Password" with masked characters "•••••". Below the input fields are two buttons: "Login" and "Clear".

- Now click on "**Firmware Update**" on the left of the screen.

**Status**

- ▶ [System Info](#)
- ▶ [Network Status](#)
- ▶ [VoIP Status](#)

**Configuration**

- ▶ [WAN](#)
- ▶ [LAN](#)
- ▶ [VoIP](#)
- ▶ [DDNS](#)
- ▶ [VLAN](#)
- ▶ [DMZ](#)
- ▶ [Virtual Server](#)
- ▶ [SNTP Settings](#)
- ▶ [Alarm Settings](#)
- ▶ [System Authority](#)
- ▶ [Save Settings/Reboot](#)

**System**

- ▶ [Reset factory default](#)
- ▶ [Backup/Restore](#)
- ▶ [Firmware Update](#)
- ▶ [Auto Update](#)

## System Information

This page illustrates the system related information.

Model Name:	V210P
Firmware Version:	Wed Dec 19 14:01:17 2007
Codec Version:	Mon Jun 04 13:32:46 2007
Software Version:	RMOS1PA_70607_NET_04 (70903) - (2)

- Now browse to the firmware file location that you previously saved to your computer. Having selected the file location field click on the **"Update"** button.

**Status**

- ▶ [System Info](#)
- ▶ [Network Status](#)
- ▶ [VoIP Status](#)

**Configuration**

- ▶ [WAN](#)
- ▶ [LAN](#)
- ▶ [VoIP](#)
- ▶ [DDNS](#)
- ▶ [VLAN](#)
- ▶ [DMZ](#)
- ▶ [Virtual Server](#)
- ▶ [SNTP Settings](#)
- ▶ [Alarm Settings](#)
- ▶ [System Authority](#)
- ▶ [Save Settings/Reboot](#)

**System**

- ▶ [Reset factory default](#)
- ▶ [Backup/Restore](#)
- ▶ [Firmware Update](#)
- ▶ [Auto Update](#)

## Firmware Update

You can update the newest firmware in this page.

File Location: C:\Documents and Settings\ [Browse...]

[Update] [Reset]

- Now the V210P interface will show you that the firmware upgrade is in progress.

#### Status

- ▶ [System Info](#)
- ▶ [Network Status](#)
- ▶ [VoIP Status](#)

#### Configuration

- ▶ [WAN](#)
- ▶ [LAN](#)
- ▶ [VoIP](#)
- ▶ [DDNS](#)
- ▶ [VLAN](#)
- ▶ [DMZ](#)
- ▶ [Virtual Server](#)
- ▶ [SNTP Settings](#)
- ▶ [Alarm Settings](#)
- ▶ [System Authority](#)
- ▶ [Save Settings/Reboot](#)

#### System

- ▶ [Reset factory default](#)
- ▶ [Backup/Restore](#)
- ▶ [Firmware Update](#)
- ▶ [Auto Update](#)

## Information

This page inform user important information.

Please wait while updating .... System will reboot automatically when finished.

- After updating the firmware the V210P will automatically reboot. The new firmware version will then be shown on the system information page as shown below. ■

- Status**
  - ▶ [System Info](#)
  - ▶ [Network Status](#)
  - ▶ [VoIP Status](#)
- Configuration**
  - ▶ [WAN](#)
  - ▶ [LAN](#)
  - ▶ [VoIP](#)
  - ▶ [DDNS](#)
  - ▶ [VLAN](#)
  - ▶ [DMZ](#)
  - ▶ [Virtual Server](#)
  - ▶ [SNTP Settings](#)
  - ▶ [Alarm Settings](#)
  - ▶ [System Authority](#)
  - ▶ [Save Settings/Reboot](#)
- System**
  - ▶ [Reset factory default](#)
  - ▶ [Backup/Restore](#)
  - ▶ [Firmware Update](#)
  - ▶ [Auto Update](#)

## System Information

This page illustrates the system related information.

Model Name:	V210P
Firmware Version:	Mon Sep 3 13:14:36 2007
Codec Version:	Mon Jun 04 13:32:46 2007
Software Version:	RMOS1PA_70607_NET_04 (70903)