


ADSL Access Cabling – Configuration 2

Remote Splitter C10100E (Central Filter)

(Where a cabling Distributor is installed in lieu of a NTD, it is Network Boundary)

(The NTD and Central Filter/Splitter may be in the same enclosure)

Also refer to Telstra Specifications DC.030 available at <http://www.telstra.com.au/adsl/equipmnt.htm>

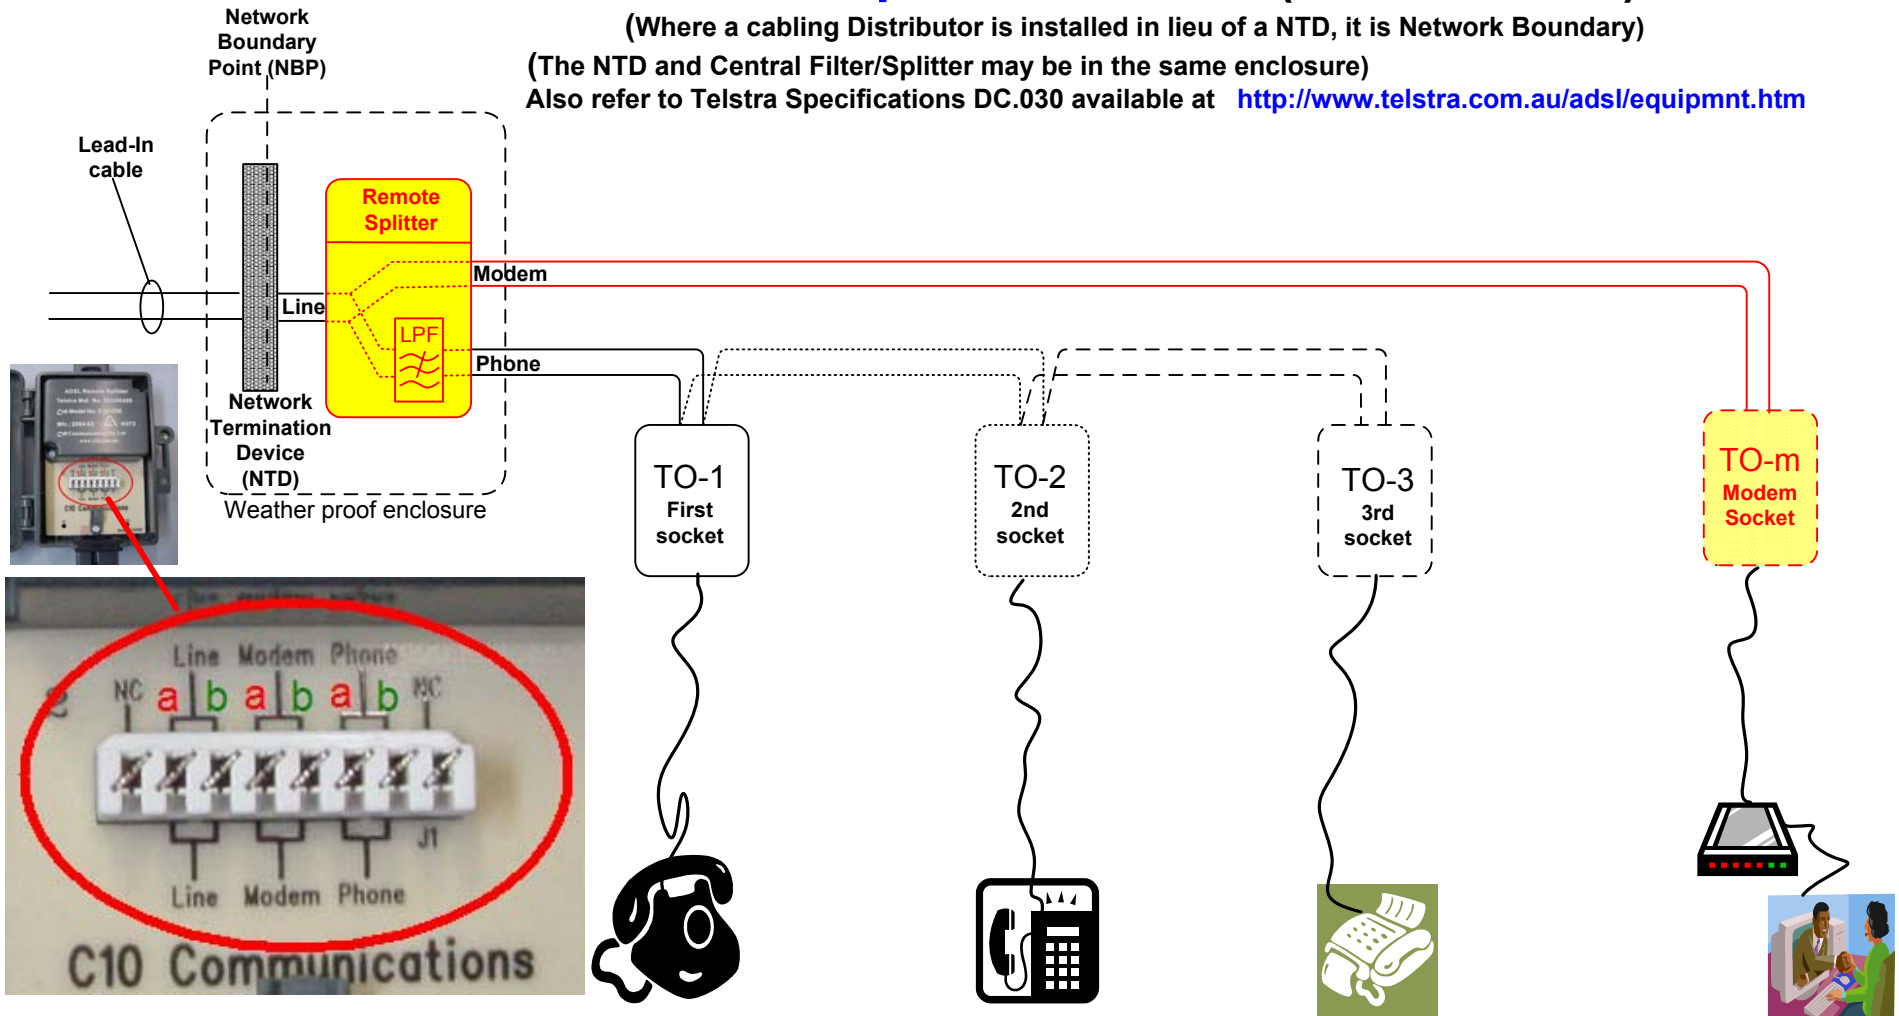


ADSL Access Cabling – Configuration 3

Remote Splitter C10100E (Central Filter)

(Where a Cabling Distributor is installed in the customer premises, it is the NBP)

Also refer to Telstra Specifications DC.030 available at <http://www.telstra.com.au/adsl/equipmnt.htm>

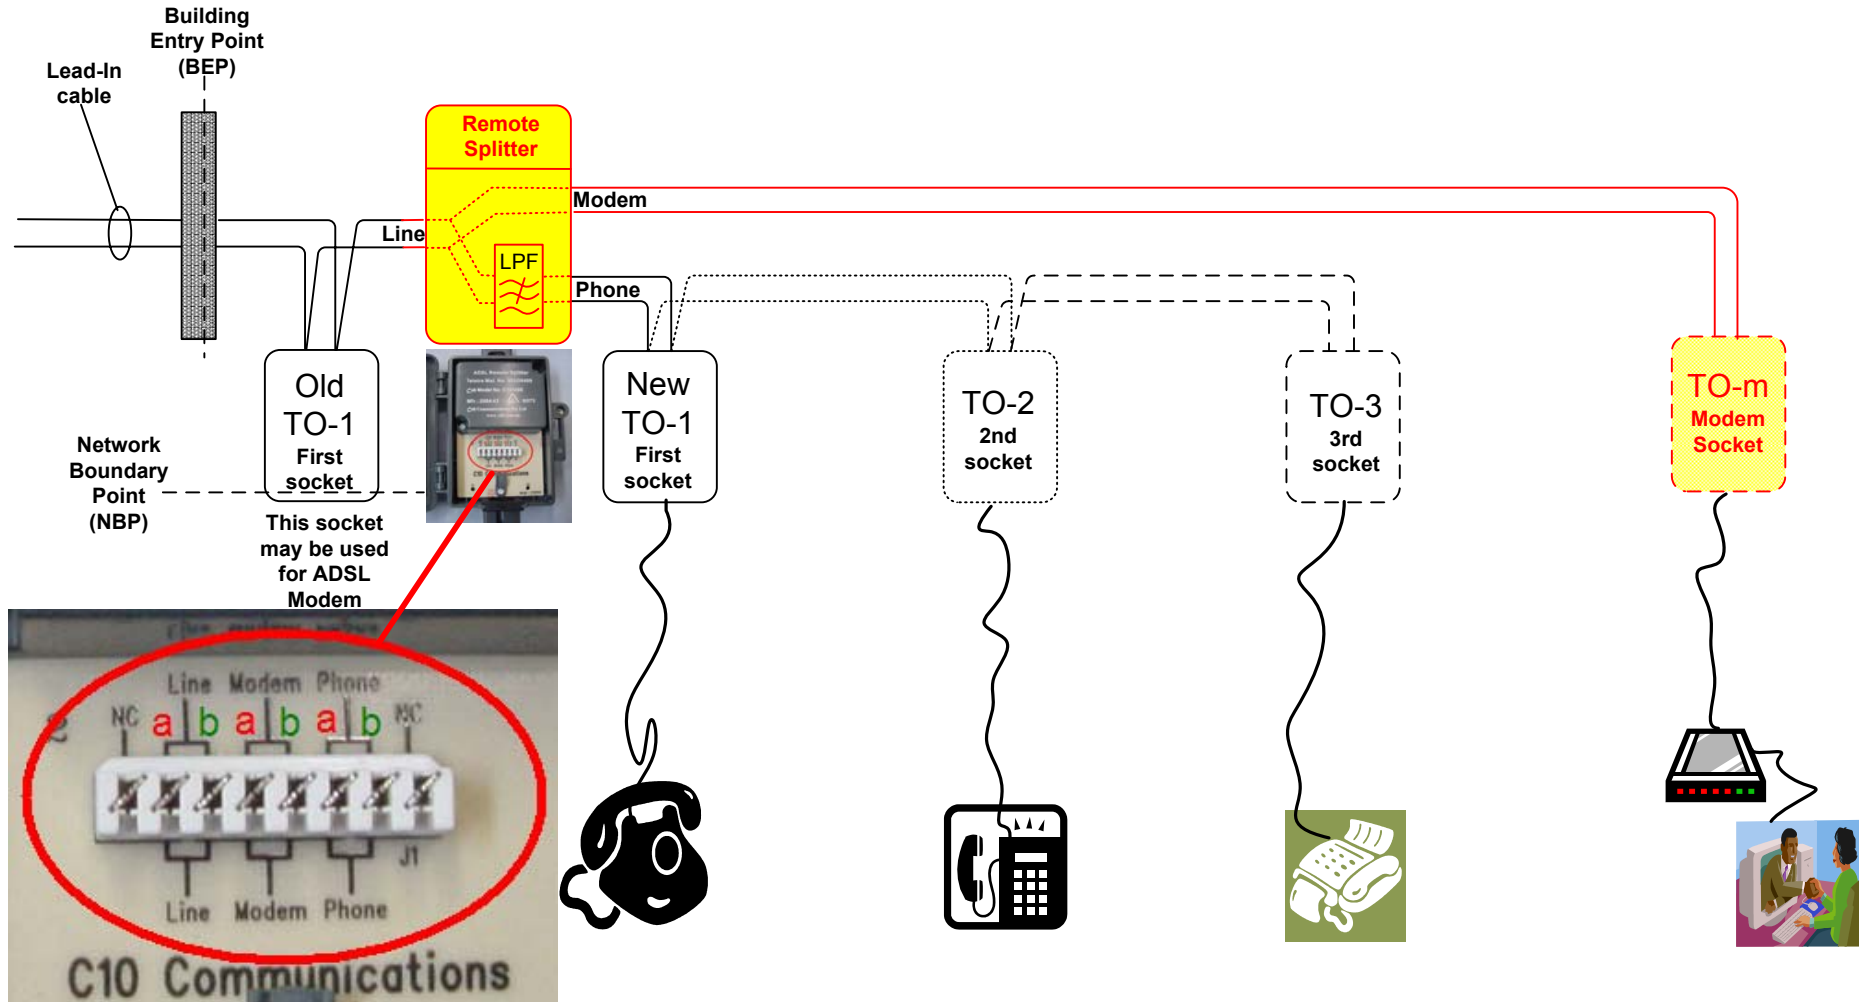


ADSL Access Cabling – Configuration 4

Remote Splitter C10100E (Central Filter)

(Where a Cabling Distributor installed in the Customer's tenancy Area)

Also refer to Telstra Specifications DC.030 available at <http://www.telstra.com.au/adsl/equipmnt.htm>

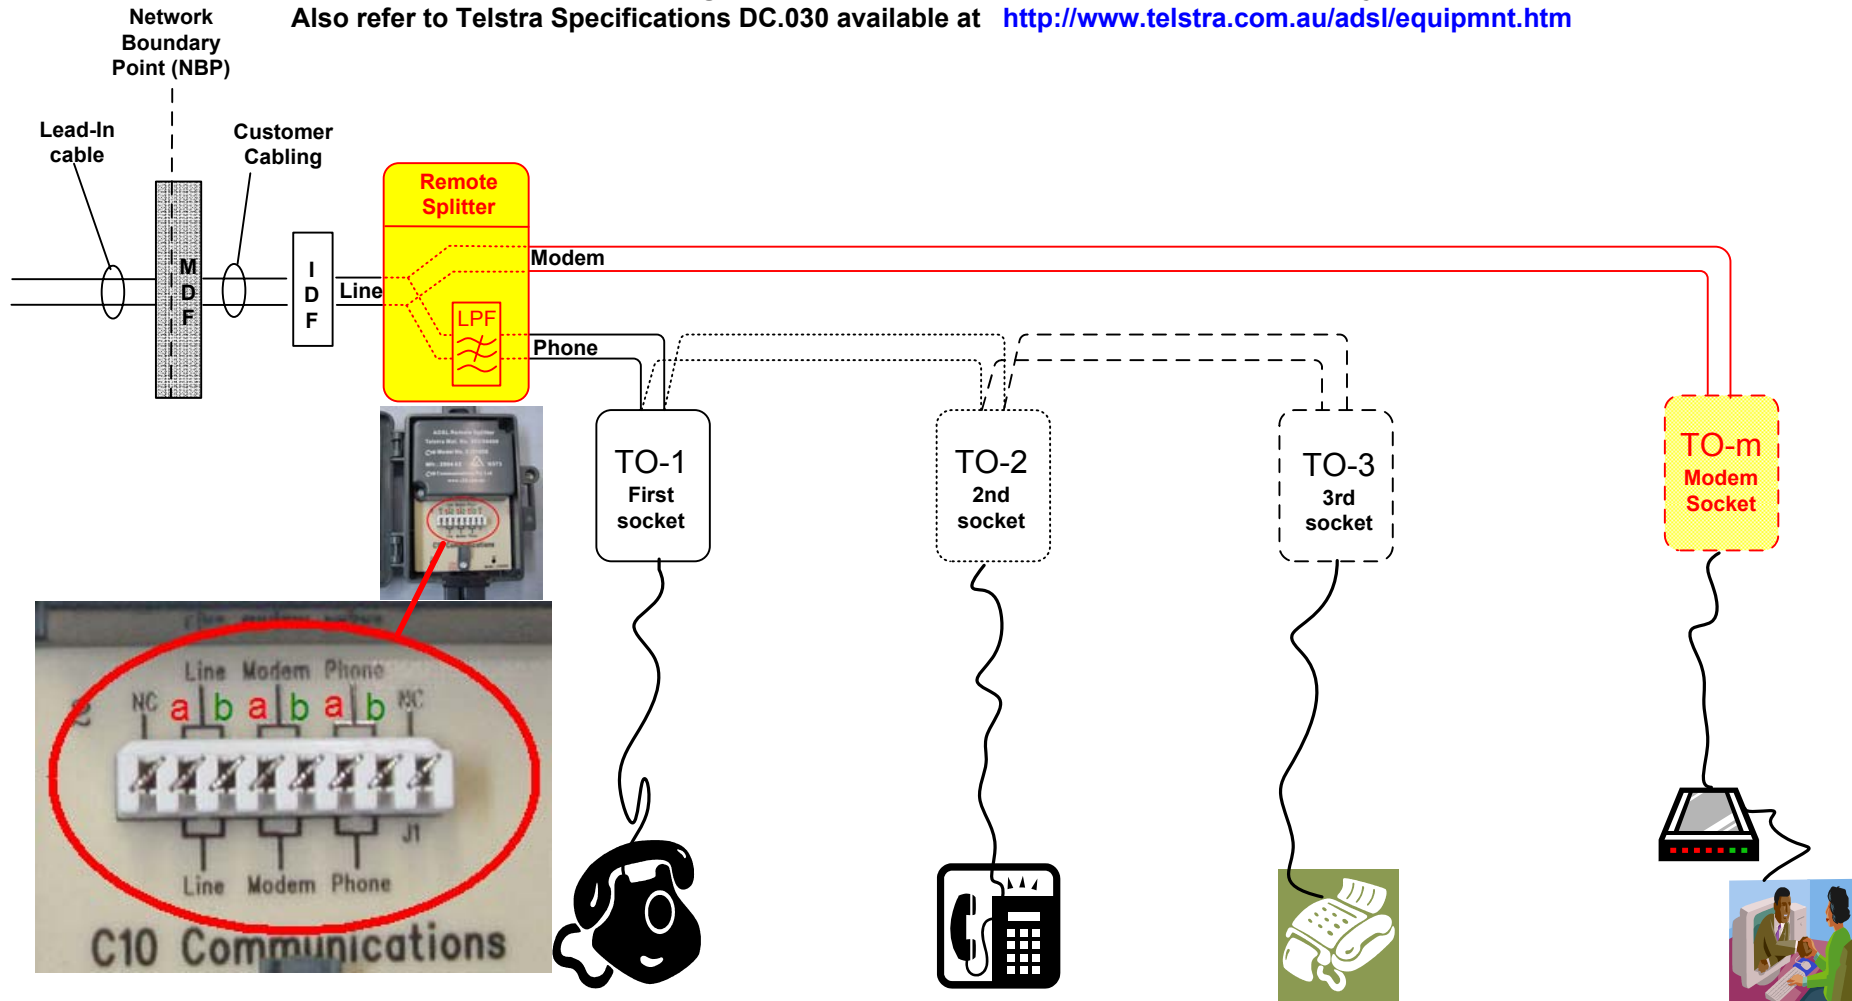

ADSL Access Alarm Cabling – Configuration 6 with C10100E Remote Splitter (Central Filter) (Mode 3 Auto Dial - Back to Base)

Note, pin numbers shown of 611 socket, or of 8-pin modular (shown in bracket) i.e.

611 socket pin 2, 6, 1, 5
8-Pin modular socket pin (5), (4), (6), (3)

