

Half-Bridge on the NB5Plus4 and NB5Plus4W

To setup a Half-Bridge connection, first log into the NB5Plus4/W Easy Config page
http://192.168.1.1.

(For more information on how to connect to the Easy Config page, please refer the user manual.)

Once logged in, click 'Advance Settings', 'Setup' tab then 'pppoe' from the left hand menu.

- Enter the username and password from your Internet Service Provider.
- Select 'Half Bridge' and click **Apply**.
- After applying, restart your computer.

NetComm® HOME **SETUP** ADVANCED WIRELESS TOOLS STATUS EASYCONFIG HELP

LAN Setup
LAN Configuration
Ethernet Switch
WAN Setup
New Connection
Modem
pppoe
Log Out

PPPoE Connection Setup

Name: Type: Sharing:

Options: ☒ NAT ☒ Firewall VLAN ID: Priority Bits:

PPP Settings

Username: Password:

Enable Fixed Address ☐ Fixed IP Address:

Enable AutoSetDNS ☒ DNS 1: DNS 2:

Idle Timeout: secs Keep Alive: min

Authentication: ☒ Auto ☐ CHAP ☐ PAP MTU: bytes

On Demand: ☐ Default Gateway: ☒ Enforce MTU: ☐ **Half Bridge: ☒**

PPP Unnumbered: ☐ LAN:

After changing this function, you must save & reboot your modem and your pc !!!

PVC Settings

PVC: VPI: VCI: QoS:

PCR: cps SCR: cps MBS: cells CDVT: usecs

Auto PVC: ☐

* This setting will only allow for a single computer. Your computer is now directly connected to the internet. You should install a personal firewall on your PC for security.