

NetComm

Configuring an RTA1046 with a TPG VoIP account.

Before proceeding you will need to complete the setup of all required hardware components as per the User Guide that came supplied with your Dynalink RTA1046.

1. Open up web-browser and type in 192.168.1.1 in the address bar and hit enter



2. Now enter in the modem user name password. By default the username is "admin" and the password is "admin" (without quotes).



3. Click on "Voice" on the top menu bar.

- Caller Name TPG Number (as advised by TPG)
- Username TPG Number (as advised by TPG)
- Password TPG Password (as advised by TPG)

Note: - leave rest of the setting as default settings.

SIP Basic Settings

Phone 1: **PSTN mode**
(Internet connection is not available. You can not make VOIP phone calls through this port now.)

Phone 2: **PSTN mode**
(Internet connection is not available. You can not make VOIP phone calls through this port now.)

Interface:

SIP Transport Protocol: Port:

VoIP Service Provider:

SIP Registrar Address: Port:

SIP Outbound Proxy: Port:

SIP Proxy Server Address: Port:

Registration Information

Phone	Phone Number	Caller Name	User Name	Password
1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
2	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Apply Cancel

TPG VoIP Password

TPG VoIP Number

As Given by TPG

5. Now click on "Apply".

6. The RTA1046VW will now attempt to register to Exetel and you will be presented with the following screen.



 Quick Start

 Status

 Advanced

 Wireless

 Voice

 Management

Language:

SIP Basic
SIP Extension
Audio Codec
PSTN Control
Call Log

Processing...

Firmware: 3.63h
ADSL2+: A2pB023d.d20h

- You should now be presented with the below screen confirming that your registration details have been successful

- SIP Basic
- SIP Extension
- Audio Codec
- PSTN Control
- Call Log

Firmware: 3.63n
ADSL2+: A2pB023d.d20h

SIP Basic Settings

Phone 1: **VOIP mode**
(You can make VOIP phone calls through this port now.) Register sucessfull

Phone 2: **VOIP mode**
(You can make VOIP phone calls through this port now.)

Interface:	<input type="text" value="pppoe_0_100_1"/>	
SIP Transport Protocol:	<input type="text" value="UDP"/>	Port: <input type="text" value="5060"/>
VoIP Service Provider:	<input type="text" value="Others"/>	
SIP Registrar Address:	<input type="text" value="laphone3.tpg.com.au"/>	Port: <input type="text" value="5060"/>
SIP Outbound Proxy:	<input type="text" value="laphone3.tpg.com.au"/>	Port: <input type="text" value="5060"/>
SIP Proxy Server Address:	<input type="text" value="laphone3.tpg.com.au"/>	Port: <input type="text" value="5060"/>

Registration Information

Congratulations, you can now start using a standard telephone handset that is connected to the Dynalink RTA1046VW using TPG's VoIP service.

Happy chatting!