




**How do I Send and Receive SMS Messages via Serial Connection?**

(NTC-6908)

## **How do I Send and Receive SMS Messages via Serial Connection?**

The NTC-6908 routers can send and receive SMS messages using AT commands. Please follow the steps below,

### **1. Disable SMS functionality on web UI**

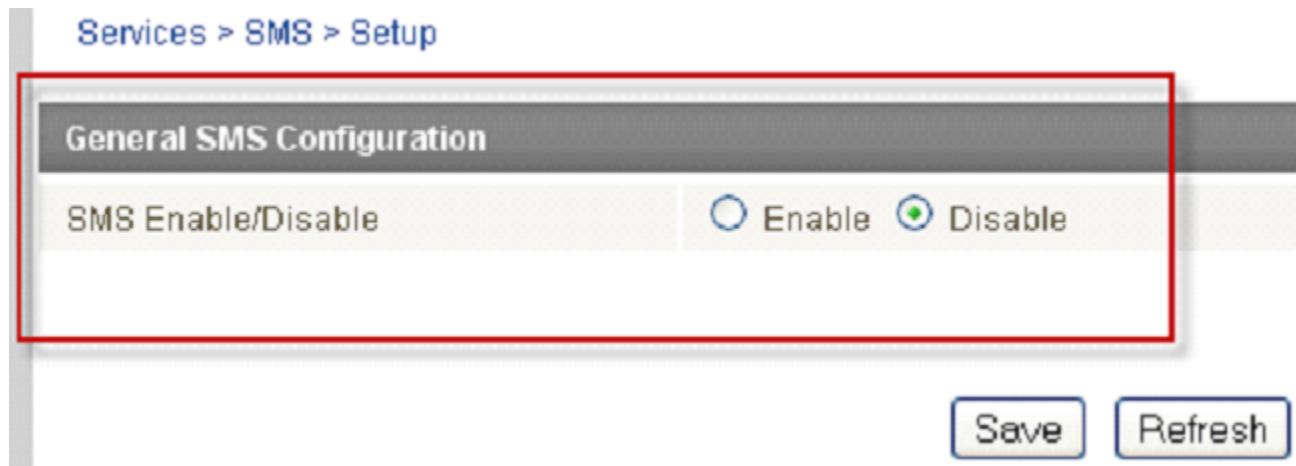

### **2. Sending a SMS via AT commands**

Connect a serial RS-232 cable from the NTC-6908 to a PC or laptop with a serial connection.

#### **Default RS-232 Communication Parameters:**

Bits Per Second:	115,200
Data Bits:	8
Parity:	None
Stop Bits:	1
Flow Control:	Hardware

**Note:** NTC-6908 use Standard RS-232 DE-9 Pinout, check User Manual for more details.

➤ **AT+CPIN?**

Check the PIN status of the SIM card. If it is PIN enabled use AT+CPIN="XXXX" (Where XXXX is the SIM PIN) to unlock the SIM.

➤ **AT+CMGF?**


Check whether the SMS is set to Text or PDU (Hex) mode. Set as appropriate to the router capabilities.

➤ **AT+CMGF=1**

Set to SMS Text mode.

➤ AT+CMGS="+61416528484"

Testing <Control +Z>

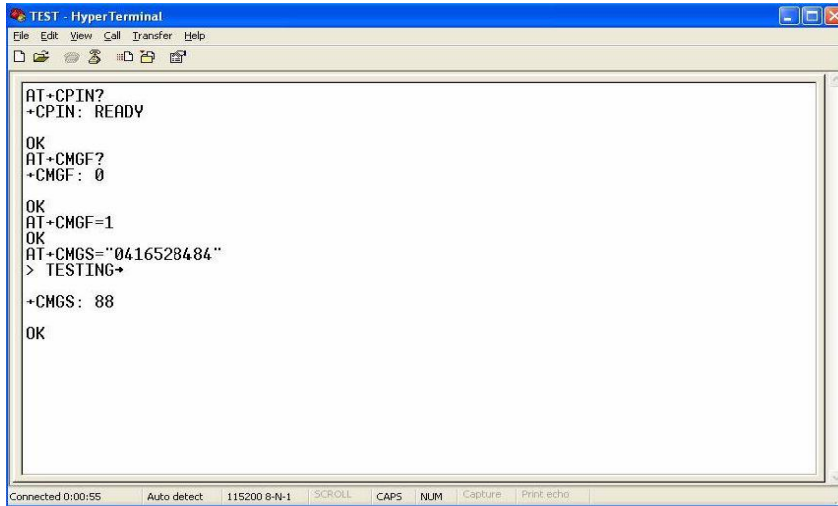

```
TEST - HyperTerminal
File Edit View Call Transfer Help
[Icons]
AT+CPIN?
+CPIN: READY
OK
AT+CMGF?
+CMGF: 0
OK
AT+CMGF=1
OK
AT+CMGS="+61416528484"
> TESTING
+CMGS: 88
OK
Connected 0:00:55 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

### 3. Reading SMS via AT Commands


- AT+CMGF=1
- Set router to SMS Text or PDU (Hex) Mode as appropriate.

- AT+CMGL="ALL"

List all received messages.

- AT+CMGR=2

Read the message with an index of 2.

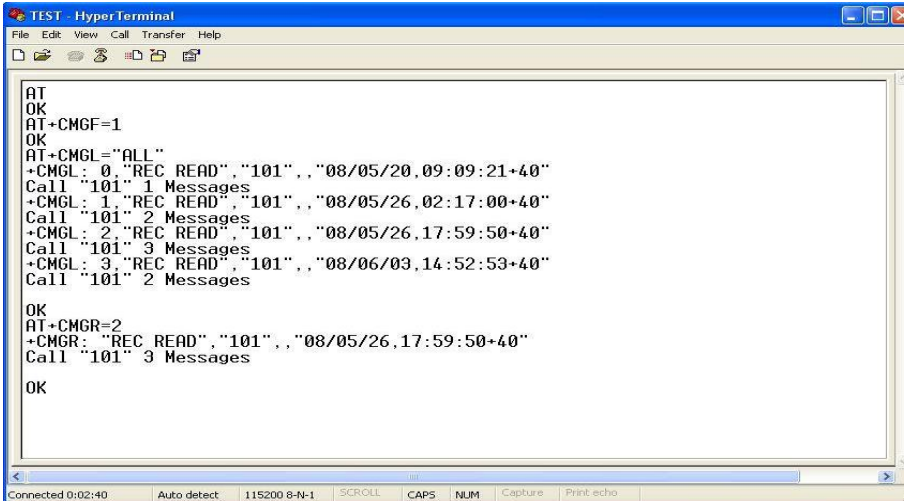

```
TEST - HyperTerminal
File Edit View Call Transfer Help
AT
OK
AT+CMGF=1
OK
AT+CMGL="ALL"
+CMGL: 0,"REC READ","101",,"08/05/20,09:09:21+40"
Call "101" 1 Messages
+CMGL: 1,"REC READ","101",,"08/05/26,02:17:00+40"
Call "101" 2 Messages
+CMGL: 2,"REC READ","101",,"08/05/26,17:59:50+40"
Call "101" 3 Messages
+CMGL: 3,"REC READ","101",,"08/06/03,14:52:53+40"
Call "101" 2 Messages
OK
AT+CMGR=2
+CMGR: "REC READ","101",,"08/05/26,17:59:50+40"
Call "101" 3 Messages
OK
Connected 0:02:40 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

#### **AT Command Manual:**

[http://media.netcomm.com.au/public/assets/pdf\\_file/0011/48296/NTC-6000Series\\_AT\\_Manual.pdf](http://media.netcomm.com.au/public/assets/pdf_file/0011/48296/NTC-6000Series_AT_Manual.pdf)