




NetCommWireless

Exetel NBN Setup
(NF1ADV)

Configuring NF1ADV for an Exetel NBN Connection

This guide will take you through the steps to connect your NF1ADV to the Exetel NBN Connection by using the Ethernet WAN interface. Ensure that your NBN cable is connected to the WAN port of the router and that your computer is connected to the LAN port or Wireless LAN before you proceed with the guide.

1. Navigate to <http://192.168.1.1> in a web browser.

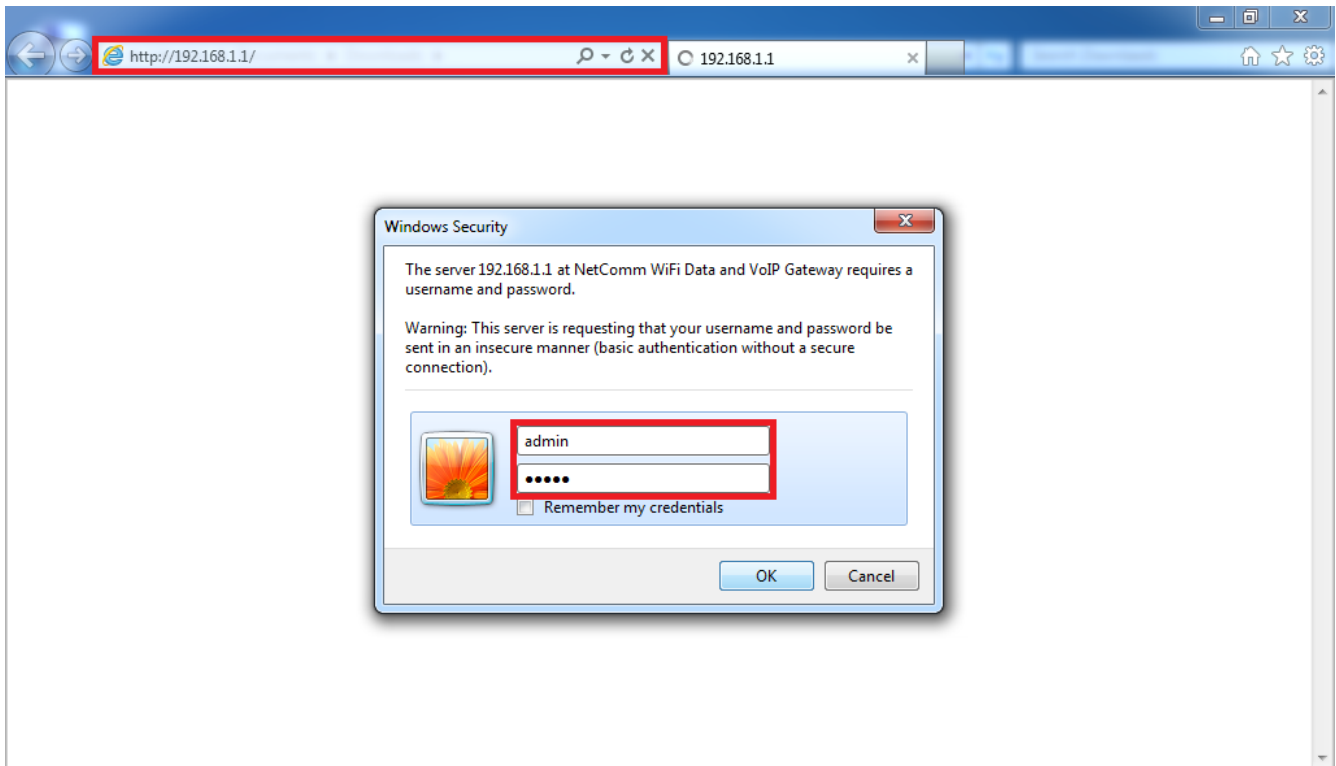

2. Type **admin** as both the username and password.
3. Click **Login** to access the basic configuration page.
4. Select the **BASIC** Menu then click on **Quick Setup**.



5. Select the **Ethernet WAN** option then click **Next**.

NETCOMM FIBRE SERIES

NF1ADV – WiFi Data and VoIP Gateway

NetComm

BASIC	WIFI	VOICE	MANAGEMENT	ADVANCED SETTINGS	STATUS
-------	------	-------	------------	-------------------	--------

Basic > Quick Setup > Internet Setup (Select one mode)

This Wizard is designed to walk you through the basic information needed to set up your device.
To continue, please select your WAN connection type.

C ADSL

☒ Ethernet WAN

Next

6. Select the **PPP over Ethernet (PPPoE)** option then click **Next**.

NETCOMM FIBRE SERIES

NF1ADV – WiFi Data and VoIP Gateway

NetComm

BASIC	WIFI	VOICE	MANAGEMENT	ADVANCED SETTINGS	STATUS
-------	------	-------	------------	-------------------	--------

Basic > Quick Setup > WAN Setup (Select one WAN mode)

Select the WAN mode for your Internet connection as specified by your Internet Service Provider (ISP).

☒ PPP over Ethernet (PPPoE)

☐ IP over Ethernet

Back Next

7. In the **Username** field, type in your Exetel username which is in the format of
<10-digitServiceNumber>@<state>.**exetel.com.au** (e.g.1234567890@nsw.exetel.com.au)

NETCOMM FIBRE SERIES

NF1ADV – WiFi Data and VoIP Gateway

NetComm

BASIC	WIFI	VOICE	MANAGEMENT	ADVANCED SETTINGS	STATUS
-------	------	-------	------------	-------------------	--------

Basic > Quick Setup > Ethernet WAN Only > PPPoE Information

You can configure your PPP over Ethernet (PPPoE) settings including: User ID and Password as supplied by your Internet Service Provider (ISP).

Protocol: **PPPoE**

User ID: 890@nsw.exetel.com.au

Password:

Back Next

8. In the **Password** field, type in the password for your Exetel account then click on the **Next** button.

9. You can go through or skip the WiFi, VoIP, USB Storage, Print Server and Password settings then click on the **Finish** button.

NETCOMM FIBRE SERIES

NF1ADV – WiFi Data and VoIP Gateway

NetComm

BASIC	WIFI	VOICE	MANAGEMENT	ADVANCED SETTINGS	STATUS
-------	------	-------	------------	-------------------	--------

Basic > Quick Setup > Passwords

Access to your broadband router is controlled through three user accounts: admin, support, and user.

For these accounts, it is recommended that you choose a unique password for added security.

The user name "admin" has unrestricted access to change and view configuration of your Broadband Router.

The user name "support" is used to allow an ISP technician to access your Broadband Router for maintenance and to run diagnostics.

The user name "user" can access the Broadband Router, view configuration settings and statistics, as well as, update the router's software.

Note: password may have up to 16 characters and may not contain a space.

User Name:

Old Password:

New Password:

Confirm Password:

Back

Finish

Remember to make a note of your username and password.

10. The NF1ADV will reboot itself to apply the changes.