

NetComm[®]
www.netcomm.com.au



Wireless Security Guide

(for Windows XP, Windows Vista, Mac OSx)

Wireless Security Guide

This guide will take you through the process of configuring, changing or checking the wireless security settings on an existing wireless network.

This guide **will not** assist you to setup a new wireless network. Please refer to the wireless setup document for your model available from the support section of the [NetComm](#)* or [Dynalink](#)** website.



Any changes to your wireless security settings will require you to reconfigure wirelessly connected devices to use the new security settings. Please ensure that you have your wireless setup guide handy for this.

* NetComm Support - <http://www.netcomm.com.au/support>

** Dynalink Support - <http://www.dynalink.co.nz/cms/index.php?page=how-to>

Step 1: Selecting a wireless security type:

There are a number of different types of wireless security to select from.

Before changing your settings, check the types of security available on your modem/router and then consult your wireless adapter manufacturer to ensure your wireless adapter is compatible with your chosen security type.

The most commonly used security types are:

- WEP (64bit or 128bit)
- WPA (Radius)
- WPA-PSK
- WPA2 (Radius)
- WPA2-PSK

The majority of wireless adapters should support one (or all) of the above security types.



You will be unable to utilise Radius server authentication without having a Radius server in place and configured on your network.

Step 2: Selecting a wireless security key:

Once you have chosen which wireless security type you want to use on your network, you will then need to create your wireless security key or wireless password.

Depending on the security type you choose, you will have the option of using either an ASCII or HEX format key.

ASCII refers to any letter or number you can see on your keyboard.

HEX refers to the letters A to F and the numbers 0 to 9.

You will need to ensure that your security key is the correct length. Your modem/router will display the required number of characters (letters and/or numbers) you need.



The default wireless key for most NetComm products is:

a1b2c3d4e5

Step 3: Setting up your wireless security:

Please ensure that your modem/router is connected to your computer using an ethernet cable before continuing.

1. Open your web browser and go to the address <http://192.168.123.254>, using admin as the password when prompted.
2. Select "**Basic Settings**" from the menu on the top of the page and then "**Wireless**" from the menu on the lefthandside.
3. If you have decided to use WEP and you would just like to change your current WEP network key, simply replace the key specified in the "**Key 1**" section and click "**Save**".

Item	Setting
Wireless	☒ Enable ☐ Disable
WMM Capable	☐ Enable ☒ Disable
SSID	netcomm n3g series
Channel	auto
Auto Select Channel	☒ Enable ☐ Disable
Security	WEP
WEP Encryption	☒ 64 bit ☐ 128 bit
Key 1	☒ HEX ☐ ASCII a1b2c3d4e5
Key 2	☐ HEX ☐ ASCII
Key 3	☐ HEX ☐ ASCII
Key 4	☐ HEX ☐ ASCII

5(64 bit) or 13(128 bit) ascii characters eg: passwd or thisisapasswd
10(64 bit) or 26(128 bit) hexadecimal characters eg: 0123456789 or
01234567890123456789012345

Save Undo WDS Setting Wireless Client List...

4. If you would like to select a different network security type instead, click the drop down menu in the **"Security"** section and select the desired security type.

The screenshot shows the 'BASIC SETTING' tab selected in the top navigation bar. On the left sidebar, the 'Wireless' option is highlighted. The main content area is titled 'Wireless Settings' and contains a table with two columns: 'Item' and 'Setting'. The 'Security' item is highlighted with a red box, and its setting is 'WEP'. Below the table, there is a note about key lengths and a 'Save' button.

Item	Setting
Wireless	☒ Enable ☐ Disable
WMM Capable	☐ Enable ☒ Disable
SSID	netcomm n3g series
Channel	auto
Auto Select Channel	☒ Enable ☐ Disable
Security	WEP
WEP Encryption	☒ 64 bit ☐ 128 bit
Key 1	☒ HEX a1b2c3d4e5
Key 2	☐ HEX
Key 3	☐ HEX
Key 4	☐ HEX

5(64 bit) or 13(128 bit) ascii characters eg: passwd or thisisapasswd
10(64 bit) or 26(128 bit) hexadecimal characters eg: 0123456789 or 01234567890123456789012345

Save Undo WDS Setting Wireless Client List...

5. After selecting your desired security type (we're using WPA2-PSK for the example), enter the wireless security key you would like to use into the **"Passphrase"** section and click **"Save"**.

The screenshot shows the 'BASIC SETTING' tab selected. The 'Wireless' option is highlighted in the sidebar. In the 'Wireless Settings' table, the 'Security' item is set to 'WPA2PSK'. The 'Passphrase' item is highlighted with a red box, and its value is 'ExampleKey'. Below the table, there is a 'Save' button and a confirmation message.

Item	Setting
Wireless	☒ Enable ☐ Disable
WMM Capable	☐ Enable ☒ Disable
SSID	netcomm n3g series
Channel	auto
Auto Select Channel	☒ Enable ☐ Disable
Security	WPA2PSK
Encryption Type	☐ TKIP ☒ AES
Passphrase	ExampleKey

Save Undo WDS Setting Wireless Client List...

Saved! The changes will take effect immediately!

Any changes to your wireless security settings will require you to reconfigure any wirelessly connected devices to use the new security settings. This is done by removing any stored wireless settings and then reconnecting to your wireless network.

Please ensure you have your wireless setup guide handy for this.