

NetComm[®]
www.netcomm.com.au

 **Dynalink**

Changing the default administration password

(RTA1046VW)

Changing the default administration page password

Changing the default password (and username)* allows you to prevent unauthorised access to the administration page of your modem / router / VOIP ATA.



Technical Support are unable to obtain your username and password.

If you forget your administration page login details, you will need to perform a factory reset to restore the default username and password of **admin**.

This will also clear any stored settings on your modem / router / VOIP ATA.

* - If supported by your model of modem / router.

Changing the default password

This guide will take you through the process of changing the password required to login to the administration page of your modem / router / VOIP ATA.

1. Open your web browser and go to the address <http://192.168.1.1>, using **admin** as the username and password.
2. Click on "**Management**" from the menu at the top of the page.
3. Click on "**Management Accounts**" from the menu on the lefthandside of the page.
4. Enter the password you would like to use into the "**New Password:**" and "**Confirm New Password:**" sections

(if you would also like to change the username, replace "**admin**" with your chosen username)

The screenshot shows the Dynalink web interface. At the top, there is a navigation bar with the Dynalink logo and several menu items: Quick Start, Status, Advanced, Wireless, Voice, and Management. The Management menu is highlighted. Below the navigation bar, there is a language dropdown menu set to English. On the left side, there is a sidebar menu with various options: Diagnostics, Management Accounts (highlighted), Management Control, TR-069 Client, Internet Time, System Log, Backup Config, Update Firmware, and Reset Router. The main content area is divided into two sections: 'Admin Account' and 'User Account'. The 'Admin Account' section has a description: 'Admin account has unrestricted access to change and view configuration of your DSL router.' It contains three input fields: 'User Name' (with 'admin' entered), 'New Password', and 'Confirm New Password'. The 'New Password' and 'Confirm New Password' fields are highlighted with a red border. Below these fields are 'Apply' and 'Cancel' buttons. The 'User Account' section has a description: 'Using the user account can configure most common functions and view statistics of your DSL router.' It also contains three input fields: 'User Name' (with 'user' entered), 'New Password', and 'Confirm New Password'. Below these fields are 'Apply' and 'Cancel' buttons. At the bottom left of the sidebar, there is a status section with the following information: Firmware: 3.64y, ADSL2+ : A2pB025c.d20h, Wireless : 3.131.35.6.

5. Click "**Apply**".

You will then be prompted to re-login to the administration page. Remember to use the new password (and username if you changed it) you have just entered.