

Generic VoIP Setup Guide

Before start configuring this unit for VoIP, you need to some information from your VSP (VoIP Service Provider) such as:

- VoIP Phone Number or Username
- VoIP Password
- Codec (For most of the service provider in Australia it is G729)
- SIP proxy address
- SIP proxy address
- Register Expire Time

Once you have get the information listed above from your VSP then you can follow these steps to configure your V90 for VoIP.

1. Navigate to <http://192.168.1.11> and press enter.




2. Enter "admin" for both username and password when prompted.

3. The main configuration page of the V90 will open. Select “Configuration” from the options on the left hand side.

The screenshot shows a Mozilla Firefox browser window displaying the NetComm V90 IP Phone status page. The browser's address bar shows the file path: file:///Z:/V90/status.html. The page features the NetComm logo and the title "V90 IP Phone". A left-hand navigation menu includes "Status", "Configurations", and "Management". The main content area is titled "Status" and is divided into two columns: "Phone Information" and "Network Information".

| Phone Information | | Network Information | |
|-------------------|--------------|---------------------|----------------|
| Phone Number | 612001249 | LAN Port | 192.168.12.176 |
| Serial Number | V9506090819 | PC Port | In Bridge Mode |
| Firmware Version | V90S-3.05-20 | PPPoE | Disabled |
| Hardware Revision | V95 | Default Route | 192.168.12.253 |
| | | DNS Server | 4.2.2.1 |

4. Now click on "Call setting" and then type in the following information.
- Phone Number VoIP Phone Number
 - Display Number VoIP Phone Number
 - Auth. ID VoIP Phone Number
 - Auth. Password VoIP Password
 - SIP proxy As per your VoIP Service Provider
 - SIP registrar As per your VoIP Service Provider
 - Domain Address As per your VoIP Service Provider

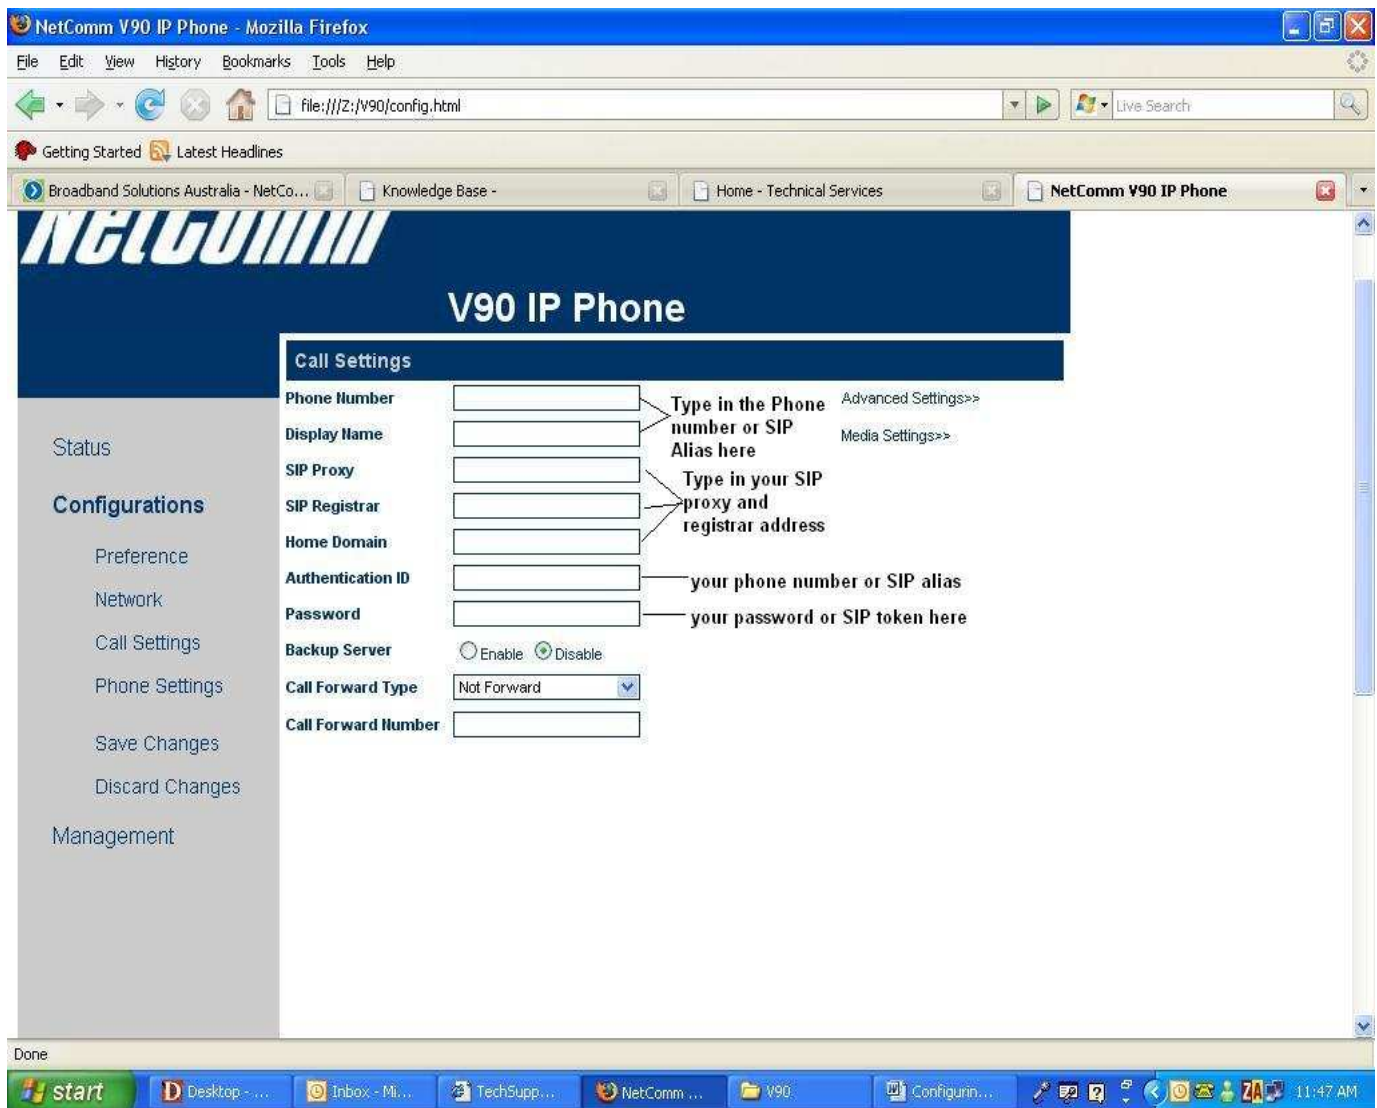

5. Select "Save changes" from the left options, to save the configuration settings.
6. Select "Management" then "Reboot" to restart the phone with the new configuration settings..