



**How do I Send and Receive SMS Messages with AT
Commands?**

(NTC-4000 Series)

How do I Send and Receive SMS Messages with AT Commands?

The NTC-4000 series routers can send and receive SMS messages using AT commands. To do complete try the following:

Sending an SMS via AT commands

Connect a serial RS-232 cable from the NTC-6908 to a PC or laptop with a serial connection.

➤ **AT+CPIN?**

Check the PIN status of the SIM card.

➤ **AT+CMGF?**


Check whether the SMS is set to Text or PDU (Hex) mode. Set as appropriate to the router capabilities.

➤ **AT+CMGF=1**

Set to SMS Text mode.

➤ **AT+CMGS="+61416528484"**

Testing <Control +Z>

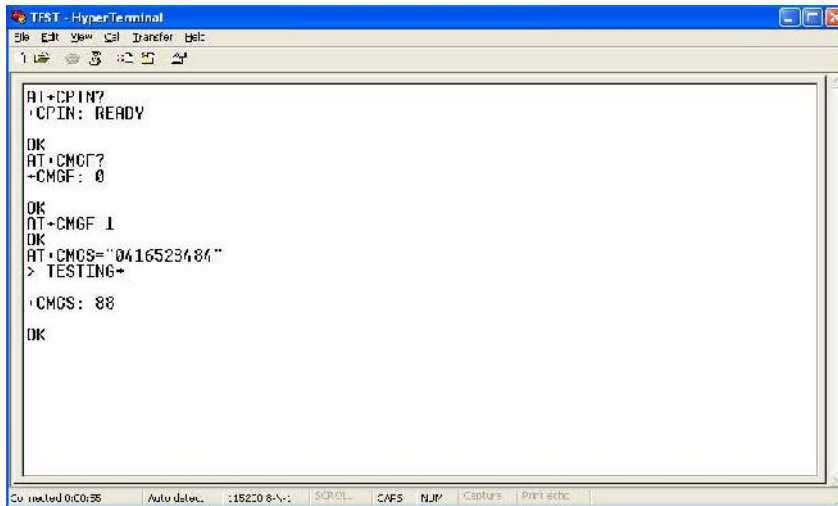

```
TRST - HyperTerminal
File Edit View Call Transfer Help
1 2 3 4 5 6 7 8 9 0

AT+CPIN?
+CPIN: READY

OK
AT+CMGF?
+CMGF: 0

OK
AT+CMGF=1
OK
AT+CMGS="+61416528484"
> TESTING+

+CMGS: 88

OK

Cu: rtscts 0;Cd: 95 Auto detect... :115200 8-N-1 SCROLL CANS NJM Captures Print: eshc
```

