



# NetComm Wireless

## **How To Get The Wireless Security Key**


 
(NP800n, NP801n, NP802n, NP803n, NP804n)

## What is the Wireless Security Key?


The wireless security is also known as the WEP key, WPA key, Passphrase or WiFi password. This guide will take you through the steps on how to check what the current wireless security key is. Please ensure that your router is connected to your computer using an ethernet cable before continuing.

Note: This guide applies to the NP800n series (this includes NP800n, NP801n, NP802n, NP803n and NP804n) excluding NP805n. Some labels in the web interface may slightly vary.

1. Navigate to <http://192.168.20.1> in a web browser.

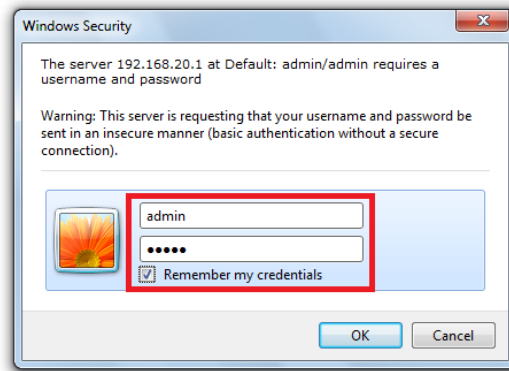

2. Enter "admin" for both username and password when prompted then click **OK**.
3. Click on the **Wireless** menu at the left hand side then click the **Security** option at the top.

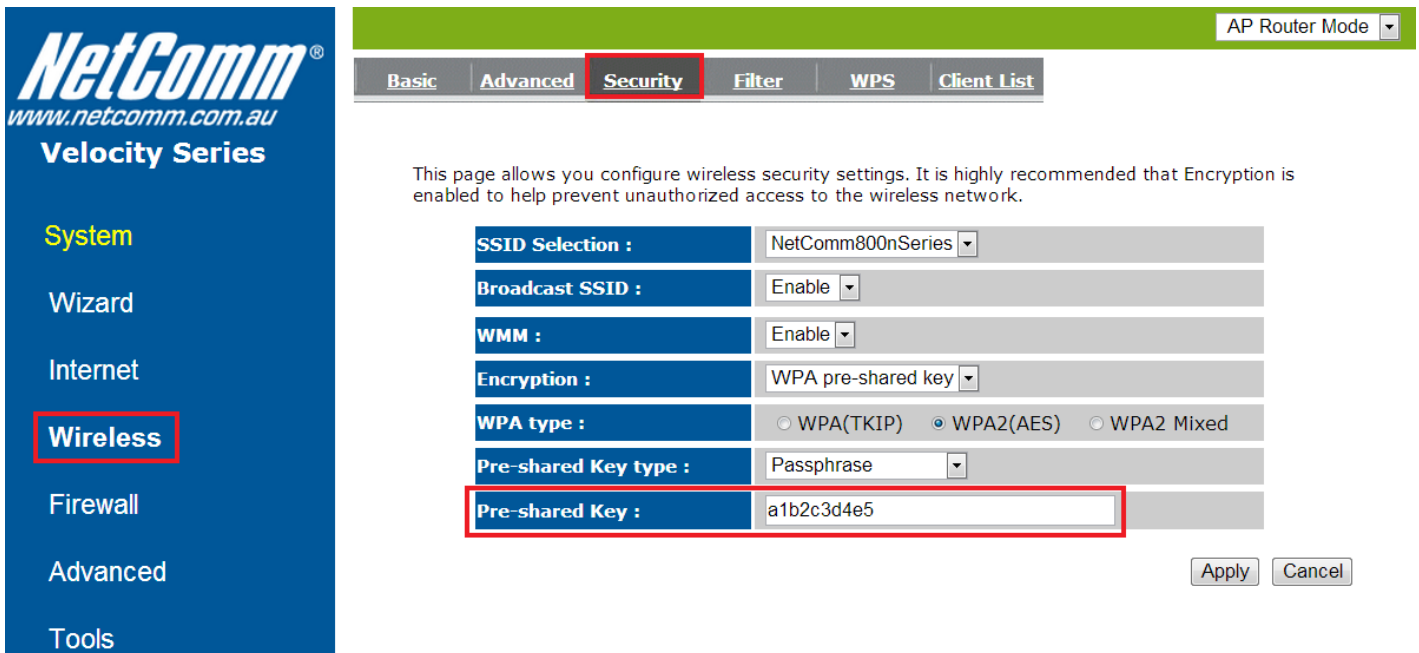A screenshot of the NetComm Velocity Series web interface. The left sidebar has a "Wireless" menu item highlighted with a red box. The top navigation bar has "Security" highlighted with a red box. The main content area shows wireless security settings. The "Pre-shared Key" field contains the value "a1b2c3d4e5" and is highlighted with a red box. Other settings include SSID Selection (NetComm800nSeries), Broadcast SSID (Enable), WMM (Enable), Encryption (WPA pre-shared key), WPA type (WPA2(AES) selected), and Pre-shared Key type (Passphrase). "Apply" and "Cancel" buttons are at the bottom right.

4. The **Pre-shared Key** (a.k.a. wireless network key) would be displayed. The example above shows that the Network/Pre-shared Key is *a1b2c3d4e5*.