

Changing MTU settings on the NB5Plus4/W

To change the MTU size, first log into the NB5Plus4/W.
(For information on how to connect to the NB5Plus4/W, please refer the user manual.)

Once logged in, click 'Advance Settings', 'Setup' tab then 'pppoe' or 'quickstart' from the menu.

The screenshot shows the NetComm web interface. The left sidebar has a menu with 'quickstart' highlighted by a red arrow. The main content area is titled 'PPPoE Connection Setup'. It contains several sections: 'General' with fields for Name (quickstart), Type (PPPoE), and Sharing (Disable); 'Options' with checkboxes for NAT and Firewall; 'PPP Settings' with fields for Username (username@isp), Password (masked), and MTU (1472 bytes, circled in red). The 'Enforce MTU' checkbox is also checked and circled in red. Other fields include Fixed IP Address, DNS 1/2, Idle Timeout, Keep Alive, Authentication (Auto selected), and Default Gateway. 'PVC Settings' includes PVC (New), VPI (8), VCI (35), QoS (UBR), PCR, SCR, MBS, CDVT, and Auto PVC. At the bottom are 'Connect', 'Disconnect', 'Apply', 'Delete', and 'Cancel' buttons.

1. Change the 'MTU' to **1472** or the suggested size.
(Different ISP's may require different MTU sizes)
2. Click 'Enforce MTU' and make sure it is checked. Then click 'Apply'