

NB3 FIRMWARE

Version: VIK-2.1.050125a

Date: 31/03/05

Improvements:

VOIP Compatibility (SIP Support)

User can amend/change MTU settings.

How to Upgrade your NB3

Procedure:

Local Image Upgrade

1. Log into Configuration Manager, click the Admin tab, and then click Local Image Upgrade in the task bar.

2. In the Source Filename text box, type the path and file name of the file as provided by your ISP. You can click Browse... to search for it on your hard drive.

The name of the upgrade file must be one of the following:

- TEImage.bin
- TEDsl.gsz
- TEAppl.gsz
- Filesys.bin
- TEPatch.bin

3. Click Upload.

The following message box displays at the bottom of the page:

Loading New Software: Please do not interrupt the upgrade process. A status page will appear automatically when loading is completed (about 1 minute)

When loading is complete, the following message displays (the file name may differ):

File: TEDsl.gsz successfully saved to flash. Please reboot for the new image to take effect.

4. Turn power to the unit off, wait a few seconds, and turn it on again.

The new software will now be in effect. If the system fails to boot or is not working properly, contact your ISP for troubleshooting assistance.

*****N.B. IMPORTANT NOTCIE RE: NB3 USB Drivers*****

Please ensure that you uninstall previous USB Drivers for the NB3 and install the latest USB drivers in this attachment before plugging in your NB3 in again.

You're NB3 WILL NOT WORK via USB if you use the earliest version of the NB3 USB Driver.
