

Generic VoIP Setup Guide

Before start configuring this unit for VoIP, you need to some information from your VSP (VoIP Service Provider) such as:


- VoIP Phone Number or Username
- VoIP Password
- Codec (For most of the service provider in Australia it is G729)
- SIP proxy address
- SIP proxy address
- Register Expire Time

Once you have get the information listed above from your VSP then you can follow these steps to configure your V85 for VoIP.


1. Navigate to <http://192.168.1.11> and hit enter.




2. Now it will ask you for router username and password which is by default "admin" and "admin" (without quotes).
3. It will open up with the main page of the router. Now click on "SIP" on your left hand side.

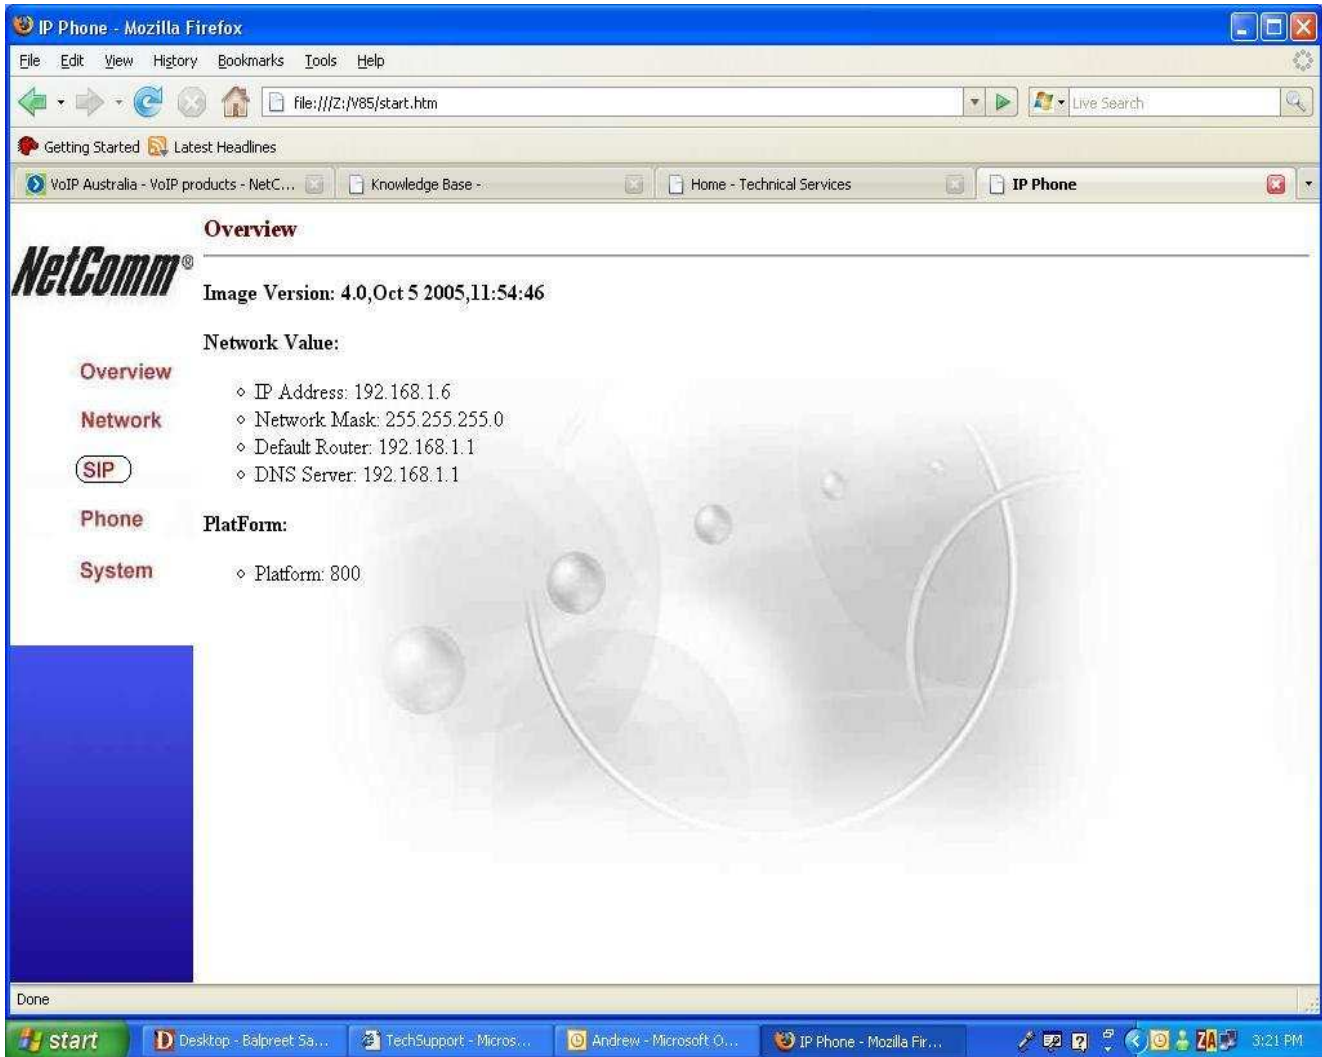

4. Now click on "Call setting" and then type in the following information.
 - Phone Number VoIP Phone Number
 - Auth. Password VoIP password
 - Auth.ID VoIP Phone Number
 - SIP Domain Address As per your VoIP Service Provider

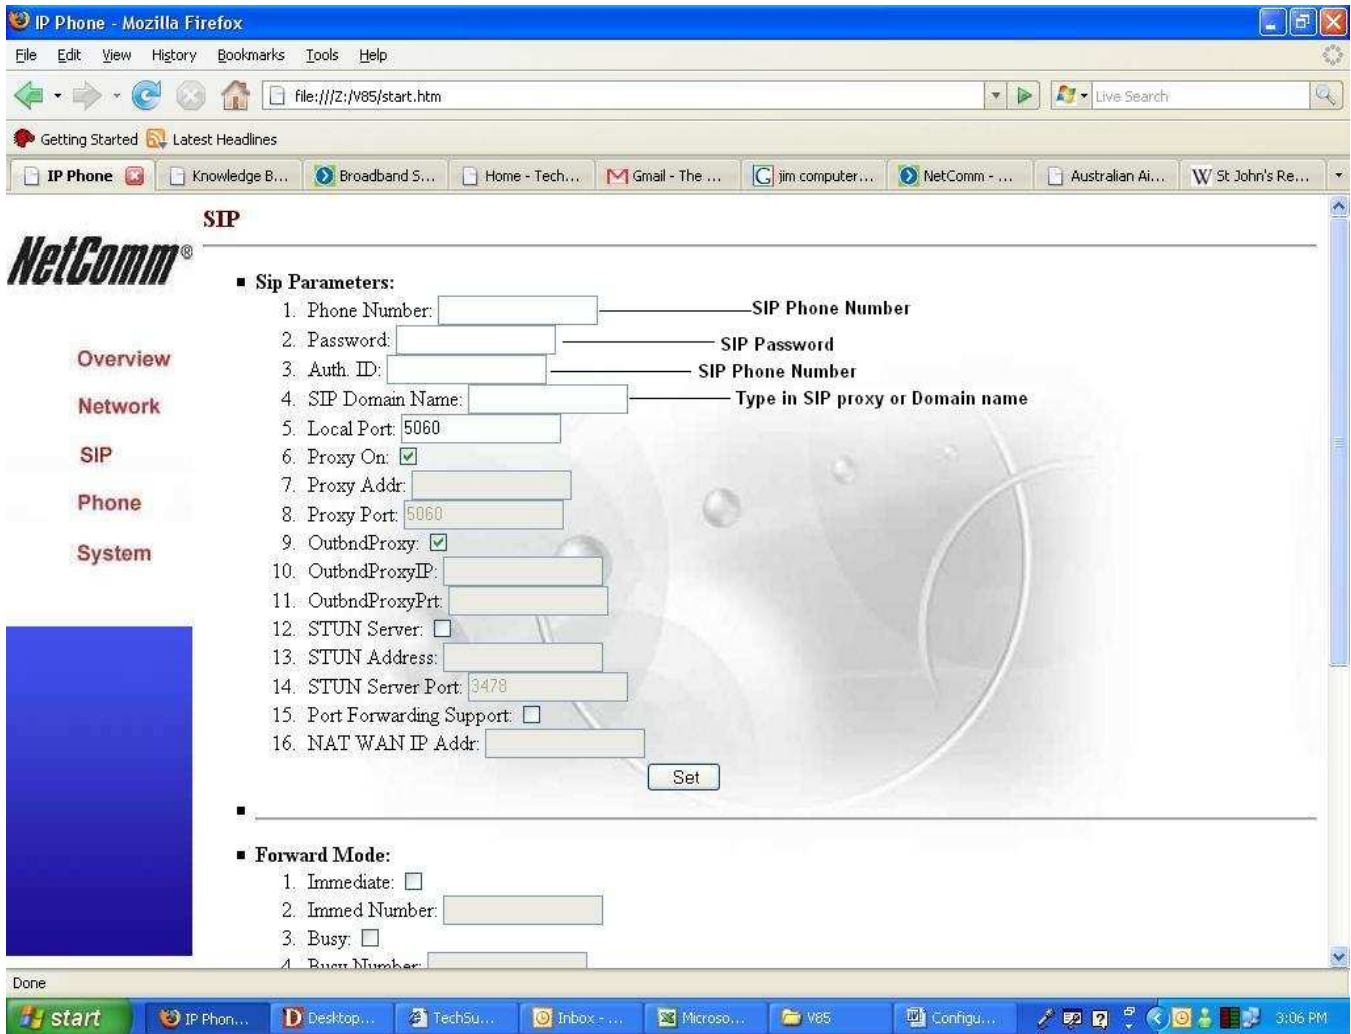

5. Now click "Set", it will save all the setting you have done.
6. Then scroll down the webpage to "Advanced" and change the high lighted settings as per your VoIP setting.
 - Reg Expire As per your VoIP Service Provider
 - Codec As per your VoIP Service Provider
 - RTP packet interval As per your VoIP Service Provider

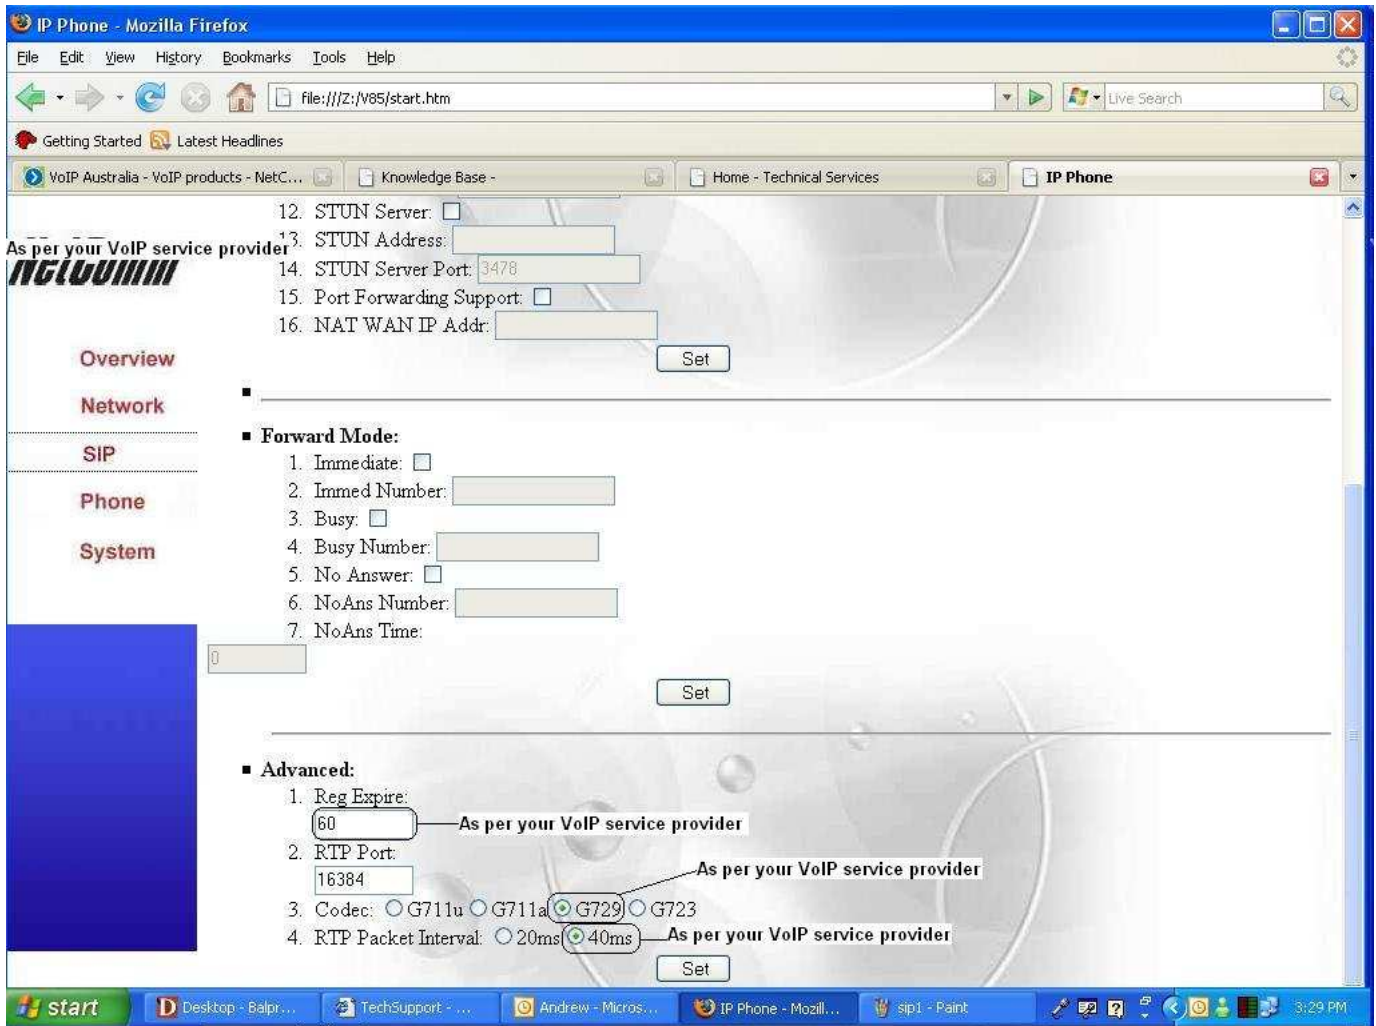

7. Now click on "set" and then click on "System" on the left hand side of the window.
8. Then click on "reboot" (it will restart your phone).