


Blink Setup Guide

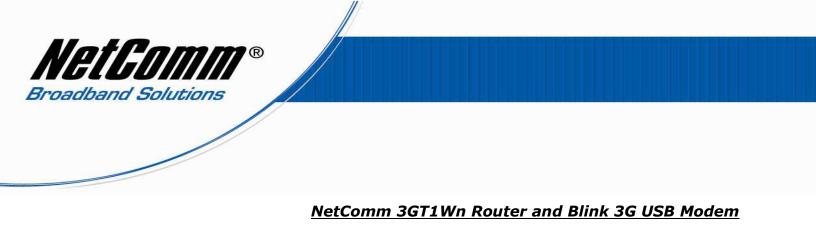

Blink 3G Internet Connection Setup Instructions:

The following instructions describe how to configure a NetComm 3GT1Wn 3G router from factory default settings to Blink's 3G Internet Service using a Blink 3G USB modem (Huawei E169).

- 1. Connect your Blink 3G modem to the USB port on the NetComm 3G router.
- 2. Using the supplied ethernet networking cable connect your computer to one of the LAN ports on the back of the NetComm 3G router.
- 3. Power on the NetComm 3G router and allow a couple of minutes for the unit to start up.
- 4. Using your web-browser (e.g Internet Explorer) open the address <u>http://192.168.20.1</u>

🖉 system   Status - Windows Internet Explorer		_ & ×
	🗾 🗟 😽 🗙 ಶ Live Search	P -
<u>File Edit Vi</u> ew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp		

5. The following NetComm 3GT1Wn configuration page should be displayed.

NetGl	n.com.au	3G Travel Router t1
Status	Login	Log
Login		
Login		
	User Name:	admin
	Password:	•••••
		Submit Clear

If you find that you're unable to open this page then please refer to the NetComm Quick Start Guide or User Guide (on supplied CD) for detailed setup instructions and troubleshooting information.



- 6. Enter "**admin**" (without quotes) into both the username and password fields then select the '**Submit**' button.
- 7. Navigate to the menu labelled 'Internet Settings' then choose the '**3G Internet Setting**s' selection.

<b>SG Travel Router t1</b>				
Status	Internet Settings	• Wireless Settings	s 🕴 Firewall	• Administration
All Status WAN           All Status         WAN           System Info         Firmware Version	36 Internet Settings WAN LAN Advanced Routing DHCP clients	1	.0.41.0 (Oct 12 2010)	)
System Up Time		0	1 : 09 : 51	
Operation Mode		G	ateway Mode	
📕 Local Networl	ĸ			
Local IP Address		1	92.168.20.1	
Local Netmask		2	55.255.255.0	
MAC Address		0	0:1D:85:DE:AD:00	

Please continue on the next page.



- 8. Set the **Auto-APN** option to disable.
- 9. In the APN field enter ``SPLNS888A1'' then select the Apply button.

NELCOM www.netcomm.com.e	3G Travel Router t1
Status	Login Log
Internet Settings > 3	G Internet Settings
by your 3G provider. The unit will default on the Status page (	u to setup your WWAN (Wireless Wide Area Network) connection. Enter the relevant settings as provided
Auto-APN	Disable 💌
APN	SPLNS888A1 Australia Choose an APN here
Dial	(default *99#)
Authentication Type	
User Name	
Password	
Verify Password	
3G NAT	Enable 💌
Interface Metric	
Operation Mode	OFF  Always On Mode: Redial Period 60 seconds
	Apply Cancel

10. Select the **Status** menu option.



11. Under the 'WWAN (3G)' section the 'Status' should be reported as being 'Up'. This is an indication that the NetComm 3G router is connected to the Internet.

NetGomm	3G Travel Rout	ter t1	
Status Login	n Log		
All Status - WAN - Pi	PPOE PPTP		
💋 System Info			
Firmware Version		1.0.41.0 (Oct 12 2010)	
System Up Time		01:05:37	
Operation Mode		Gateway Mode	
💋 Local Network			
Local IP Address		192.168.20.1	
Local Netmask		255.255.255.0	
MAC Address		00:10:85:DE:AD:00	
💋 🛛 WWAN (3G)			
Operation Mode		AlwaysOn	
Interface	Status	Local Remote	
usbO	Up	114.113.112.111	10.64.64.64
💋 Connection Status			
Module Name	USB308		
Provider	Rhyan Telecom		
APN	rhyan.connect		
Service Type	HSPA++		
Coverage	N/A		
IMEI	3456547898876		
Frequency	2100		
Signal Strength (dBm)	-61 dBm (super strong)		
SIM Status	SIM OK		

## 12. You should now be able to access the internet!

If find that you are unable to browse the Internet at this point or would like to connect your computer wirelessly to the NetComm 3G router then please refer to the Quick Start Guide or User Guide (on supplied CD) for setup instructions.