



# C10645M Splitter/Filter Installation Guide

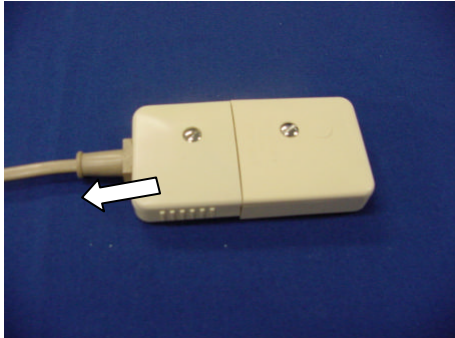

## Step 1


**Remove the Telephone Plug from the 600 series Wall Socket**

( If the Telephone Plug can not be removed easily, check fixing screw in socket as per Picture 8 ).

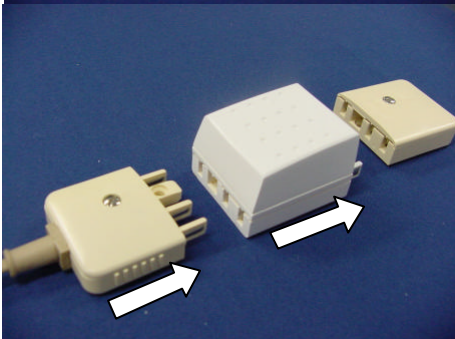

## Step 2


Install the ADSL splitter / filter Model C10645 between the Wall Socket & Telephone Plug

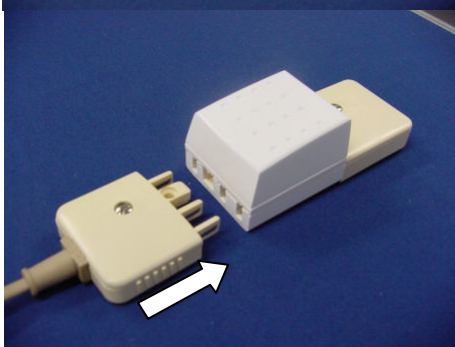

## Step 3

**Plug the ADSL splitter / filter Model C10645 to the Wall Socket.**

(If required, secure the filter plug to the wall socket, as shown in picture 8)

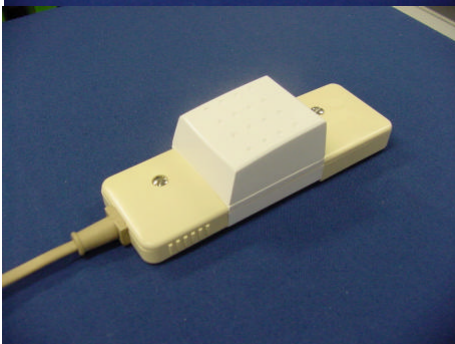


## Step 4

Plug the telephone plug to the back of the ADSL splitter / filter and test if the telephone works as normal (listen for dial tone, dialling, ringing etc...)

## Step 5

The ADSL Modem (if any) can be installed to the RJ-11/45 Socket provided in the splitter / filter.

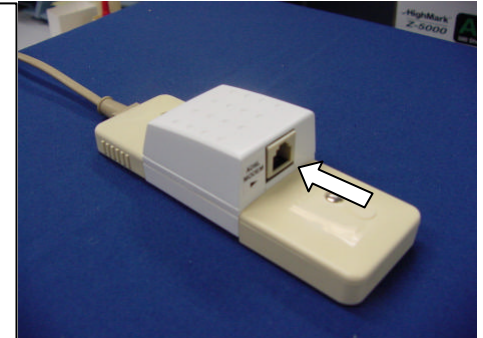

## Step 6


**Installation completed.**

(If the Modem Plug is too big (ie RJ-45 plug), and can not plug in , please refer to Picture 7).



## Picture 7

( If the modem cable plug is too big (ie RJ-45 plug), and can not plug in, please remove the 8P-to-6P adaptor insert, before plugging in the ADSL modem cable to the splitter / filter)

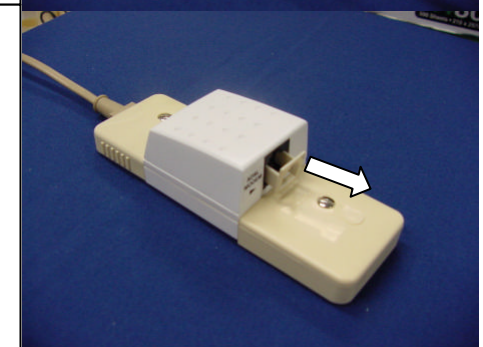

## Picture 8

( If the Telephone Plug can not be removed easily, check fixing screw in socket, by opening the wall socket cover, and remove the fixing screw).

