


Typical Housing Telephone Wiring

without Back-to-Base Alarm system

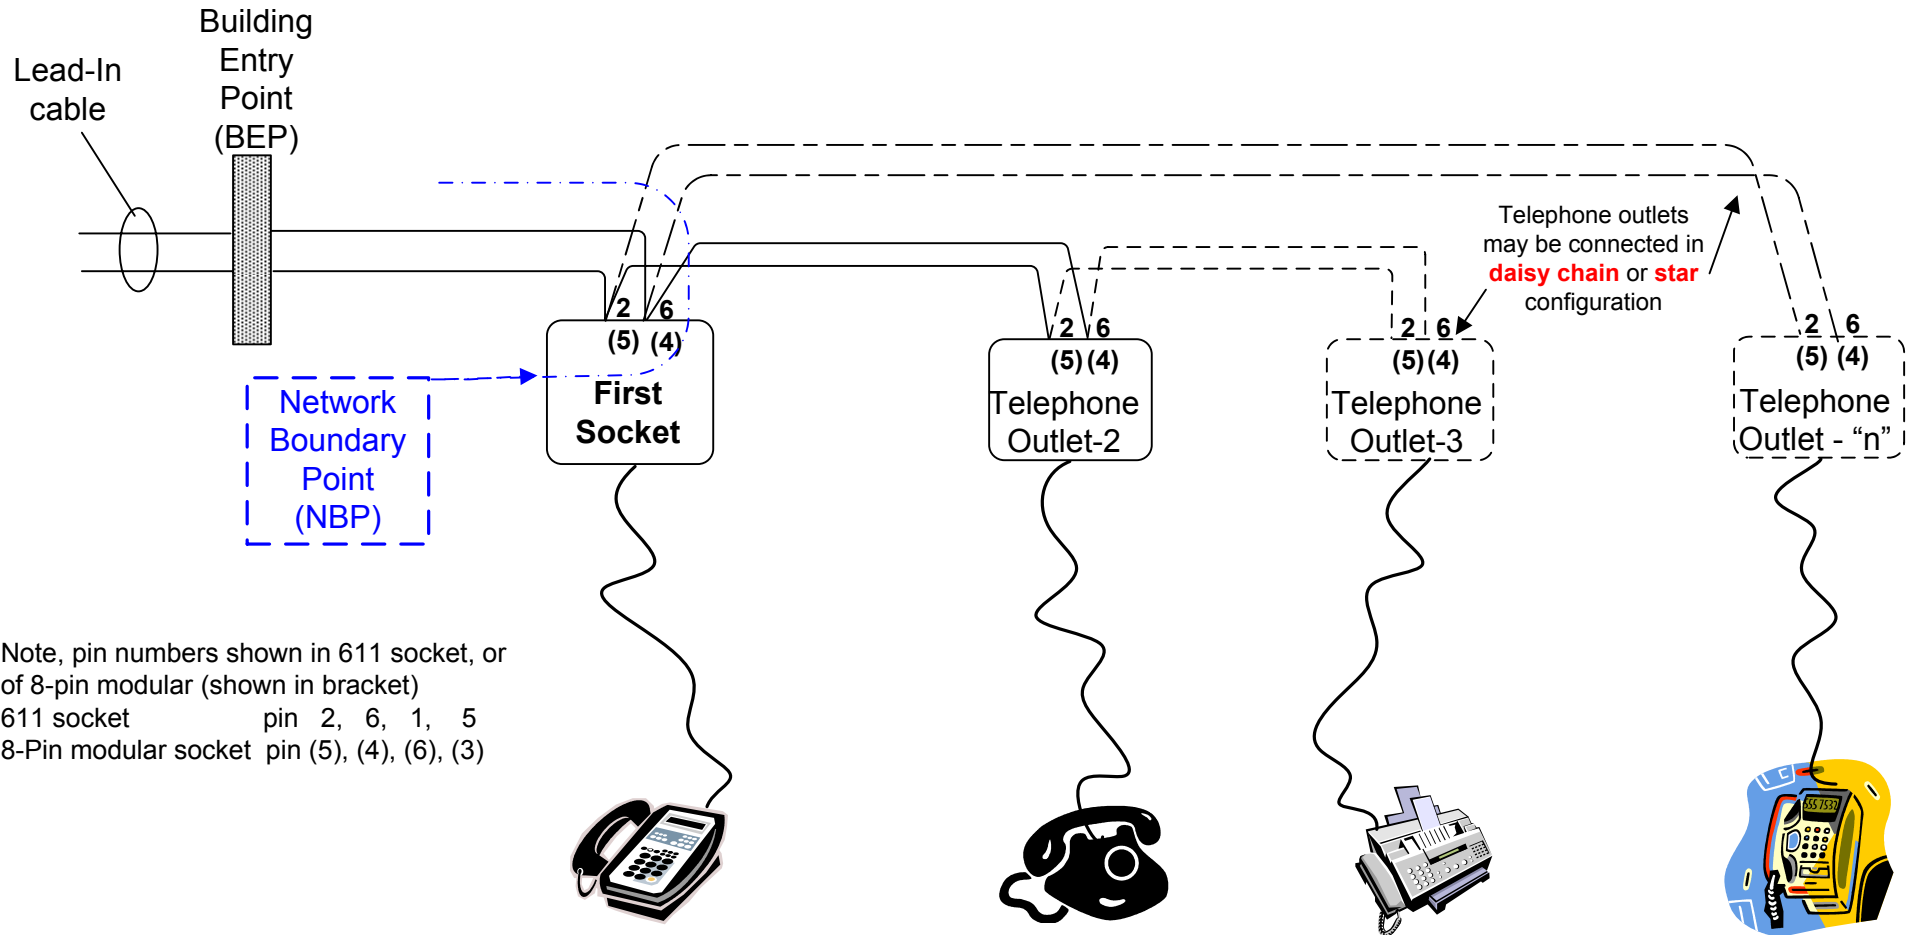

ADSL Access and Filtering – (1)

without Back-to-Base Alarm system

using **C10245M, C10345M, C10645M** Distributed Filters

(Distributed Filter also called In-line Filter or Micro Filter)

Refer to [C10 Easy Guide](#) for selection of Filters to the best fit of your telephone socket styles

