




Let's get started >

Unpack your **NB12WD ADSL2+ Wireless Router** and check you have the following items

- NB12WD ADSL2+ Router
- 15VDC 1.6 Amps power supply
- 2x RJ-11 ADSL Line connection cables
- RJ-45 10/100 Ethernet cable
- User Guide and Driver CD
- This printed Quick Start Guide
- 1x DECT handset
- 1x Charging Dock for handset
- 1x Power Supply for charging dock
- 2x AAA batteries with battery cover for handset
- USB 2.0 cable

If you have all the items listed above please turn over for instructions on getting started with your new Gateway.

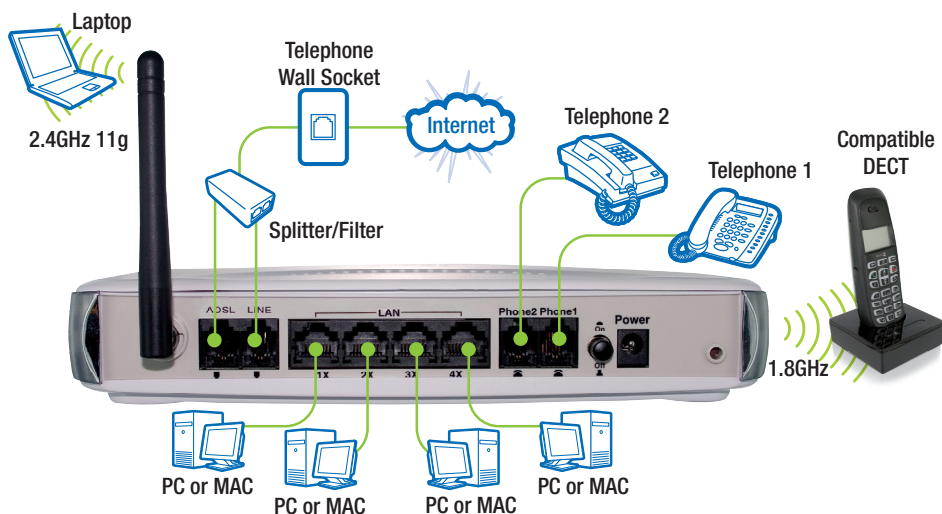

Connecting your device

1. With the supplied Ethernet cable, connect your computer to any LAN port on your NB12WD.
2. Connect your telephone wall socket to an ADSL Splitter/Filter (not supplied).
3. With one of the supplied telephone cables, connect the socket labelled **ADSL** on your NB12WD to the socket labelled **ADSL** on your ADSL Splitter/Filter (not supplied).
4. If you wish to use Lifeline backup function (in case of an issue with your VoIP service), please ensure that:
 - a. the **Line** port of the NB12WD is connected to the socket labelled **PHONE** on the ADSL Splitter/Filter
 - AND
 - b. Please also ensure that your telephone handset is connected to one of the ports on your NB12WD labeled **Phone1** or **Phone2**.
5. Connect the supplied Power Adapter to the wall power outlet and to the socket labeled **Power** on the NB12WD.
6. Switch on your NB12WD at the power outlet and press the on/off button to the **ON** position and wait 1 minute for it to power up.
7. Open a web-browser on your computer and browse to **192.168.1.1**.
8. When asked for a username and password, enter the default of **admin** into both fields.
9. Select **Quick Setup** from the menu on the left, and follow the instructions to establish your Internet connection.

Using DECT

To use a DECT handset you must first have a VoIP account configured (see below) or have your phone line plugged into the **LINE** port on your NB12WD (as in above diagram).



To register a DECT Handset with the NB12WD, hold down the **PAGE** button on the side panel of the NB12WD until the green LED labeled **DECT** lights up. Next go to the **Register** menu of your DECT Handset and enter in the PIN - **1590**.

Detailed instructions on setting up the supplied DECT handset can be found in the separate DECT User Guide (on CD).

Using VoIP

To configure VoIP on your NB12WD, please refer to page 93 of the User Guide – **7.7 About SIP and VoIP**.

Establishing a Wireless Connection

You can connect multiple wireless devices, including laptops, desktops and PDAs by following these 2 basic steps

1. Using your device, scan for wireless networks in your area, select the network called **NetComm Wireless** and click **connect**
2. Enter the following default security key: **a1b2c3d4e5**

Note: To ensure wireless security, we recommend you change the default settings in the User Interface. For more detail, see your User Guide.