


Configuring a V220 with an MyNetFone VoIP account.

Before proceeding you will need to complete the setup of all required hardware components as per the User Guide that came supplied with your V220.

- Ensure that you have the following information on hand. This information will be provided by MyNetFone.
 1. VoIP Username
 2. VoIP Password
 3. Sip Proxy Server/Domain Name
 4. Codec
- Connect your V210P to your computer. Ensure that your computer is connected to the LAN port of the VoIP ATA. The WAN port of the V220 should be connected to the ADSL/cable modem or router (Internet Source).
- Now open up your web browser (Internet Explorer or Mozilla Firefox or Safari or any other browser). In the address bar, type <http://192.168.22.1>

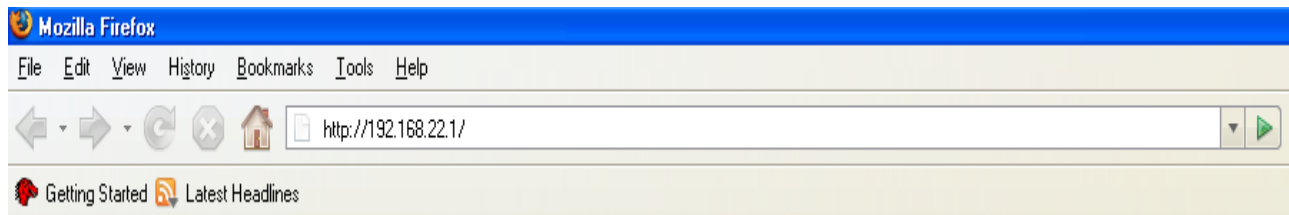

- Now Press enter or click on "go". The Login screen will now appear as per the picture below
- In the Username field, type in **admin**
- In the Password field, type in **admin**
- Click on the **Login** button

Login V210P

Enter your username and password to login
V210P

Username

Password

- You will then be presented with the System Information page.
Click on "**VoIP**" on the left hand side and then click on "**SIP Service Provider**".

Status

- ▶ [System Info](#)
- ▶ [Network Status](#)
- ▶ [VoIP Status](#)

Configuration

- ▶ [WAN](#)
- ▶ [LAN](#)
- ▶ [VoIP](#)
- ▶ [DDNS](#)
- ▶ [VLAN](#)
- ▶ [DMZ](#)
- ▶ [Virtual Server](#)
- ▶ [SNTP Settings](#)
- ▶ [Alarm Settings](#)
- ▶ [System Authority](#)
- ▶ [Save Settings/Reboot](#)

System

- ▶ [Reset factory default](#)
- ▶ [Backup/Restore](#)
- ▶ [Firmware Update](#)
- ▶ [Auto Update](#)

System Information

This page illustrates the system related information.

| | |
|-------------------|------------------------------------|
| Model Name: | V210P |
| Firmware Version: | Wed Dec 19 14:01:17 2007 |
| Codec Version: | Mon Jun 04 13:32:46 2007 |
| Software Version: | RMDS1PA_70607_NET_04 (70903) - (2) |

Status

- [System Info](#)
- [Network Status](#)
- [VoIP Status](#)

Configuration

- [WAN](#)
- [LAN](#)
- [VoIP](#)
- [DDNS](#)
- [VLAN](#)
- [DMZ](#)
- [Virtual Server](#)
- [SNTP Settings](#)
- [Alarm Settings](#)
- [System Authority](#)
- [Save Settings/Reboot](#)

System

- [Reset factory default](#)
- [Backup/Restore](#)
- [Firmware Update](#)
- [Auto Update](#)

VoIP Configuration

You can configure the VoIP settings, please click the hyperlink.

SIP Settings

[SIP Service Provider](#)

[Port Settings](#)

[Codec Settings](#)

[Codec ID Settings](#)

[DTMF Settings](#)

[RPort Settings](#)

[QoS Settings](#)

Phone Book

[Phone Book](#)

Phone Settings

[Call Forward](#)

[Volume Settings](#)

[DND Settings](#)

[Caller ID Settings](#)

[Dial Plan Settings](#)

[Flash Time Settings](#)

- You will now be presented with your SIP Settings. You will need to fill in the information in the required fields given by MyNetFone as mentioned earlier: your MyNetFone username, password, Sip Proxy Server/Domain Name and Codec.

- | | |
|-----------------------------|-----------------------------|
| 1. SIP Proxy Domain: | sip.mynetfone.com.au** |
| 2. Proxy Server: | sip.mynetfone.com.au** |
| 3. Display Name: | MyNetFone VoIP Phone Number |
| 4. User Name: | MyNetFone VoIP Phone Number |
| 5. Auth. ID: | MyNetFone VoIP Phone Number |
| 6. Auth. Password: | MyNetFone VoIP Password |
| 7. SIP Expire Time: | 240 |

** Please check the details for your VoIP account with MyNetFone as they have a couple of SIP servers. Some of them are listed below: -

sip.mynetfone.com.au
 sip00.mynetfone.com.au
 sip01.mynetfone.com.au

SIP Service Provider

You can set information of service domains in this page.

| SIP Service Provider | |
|----------------------|---|
| Active: | <input checked="" type="radio"/> On <input type="radio"/> Off |
| SIP Proxy Domain: | <input type="text" value="sip.mynetfone.com.au"/> |
| Proxy Server: | <input type="text" value="sip.mynetfone.com.au"/> |
| Outbound Proxy: | <input type="text" value="sip.mynetfone.com.au"/> |
| Display Name: | <input type="text" value="MyNetFone VoIP Phone Number"/> |
| User Name: | <input type="text" value="MyNetFone VoIP Phone Number"/> |
| Auth. ID: | <input type="text" value="MyNetFone VoIP Phone Number"/> |
| Auth. Password: | <input type="text" value="MyNetFone VoIP Password"/> |
| Subscribe for MWI: | <input type="radio"/> On <input checked="" type="radio"/> Off |
| Status: | Not Registered |

| | |
|------------------|---|
| SIP Expire Time: | <input type="text" value="240"/> (15~86400 sec) |
| Use DNS SRV: | <input type="radio"/> On <input checked="" type="radio"/> Off |

Click on "**Submit**" at the bottom of the page to apply the settings.

- Now click on "**Save Settings/Reboot**" and then click on "**Save & Reboot**". This will save your settings in the V210P and reboot the device.

Status

- ▶ [System Info](#)
- ▶ [Network Status](#)
- ▶ [VoIP Status](#)

Configuration

- ▶ [WAN](#)
- ▶ [LAN](#)
- ▶ [VoIP](#)
- ▶ [DDNS](#)
- ▶ [VLAN](#)
- ▶ [DMZ](#)
- ▶ [Virtual Server](#)
- ▶ [SNTP Settings](#)
- ▶ [Alarm Settings](#)
- ▶ [System Authority](#)
- ▶ [Save Settings/Reboot](#)

System

- ▶ [Reset factory default](#)
- ▶ [Backup/Restore](#)
- ▶ [Firmware Update](#)
- ▶ [Auto Update](#)

Save Settings / Reboot

You have to save settings & reboot to effect them.

Save Settings and reboot:

Save & Reboot

You can press the reboot button to restart the system.

Reboot system without saving settings:

Reboot Only

- After rebooting the V210P, check the status of the lights. The SIP light should turn ON. That means you are connected to MyNetFone. You can also check within the V210P by clicking on "**VoIP Status**" on the left hand side.

Status

- ▶ [System Info](#)
- ▶ [Network Status](#)
- ▶ [VoIP Status](#)

Configuration

- ▶ [WAN](#)
- ▶ [LAN](#)
- ▶ [VoIP](#)
- ▶ [DDNS](#)
- ▶ [VLAN](#)
- ▶ [DMZ](#)
- ▶ [Virtual Server](#)
- ▶ [SNTP Settings](#)
- ▶ [Alarm Settings](#)
- ▶ [System Authority](#)
- ▶ [Save Settings/Reboot](#)

System

- ▶ [Reset factory default](#)
- ▶ [Backup/Restore](#)
- ▶ [Firmware Update](#)
- ▶ [Auto Update](#)

VoIP Service Status

The page shows current status of VoIP SIP Service provider.

| VoIP Service Status | |
|---------------------|--|
| SIP Proxy Domain: | <input type="text" value="sip.mynetfone.com.au"/> |
| Display Name: | <input type="text" value="MyNetFone VoIP Phone Number"/> |
| User Name: | <input type="text" value="MyNetFone VoIP Phone Number"/> |
| Status: | Registered |

- Your V210P is now configured and you can plug in the phone set in the V210P and check for the dial tone.

Congratulations, you now connected to MyNetFone's VoIP service using NetComm V210P.